


REMOTE SPRINKLER VALVE STATION ASSEMBLY N.T.S.

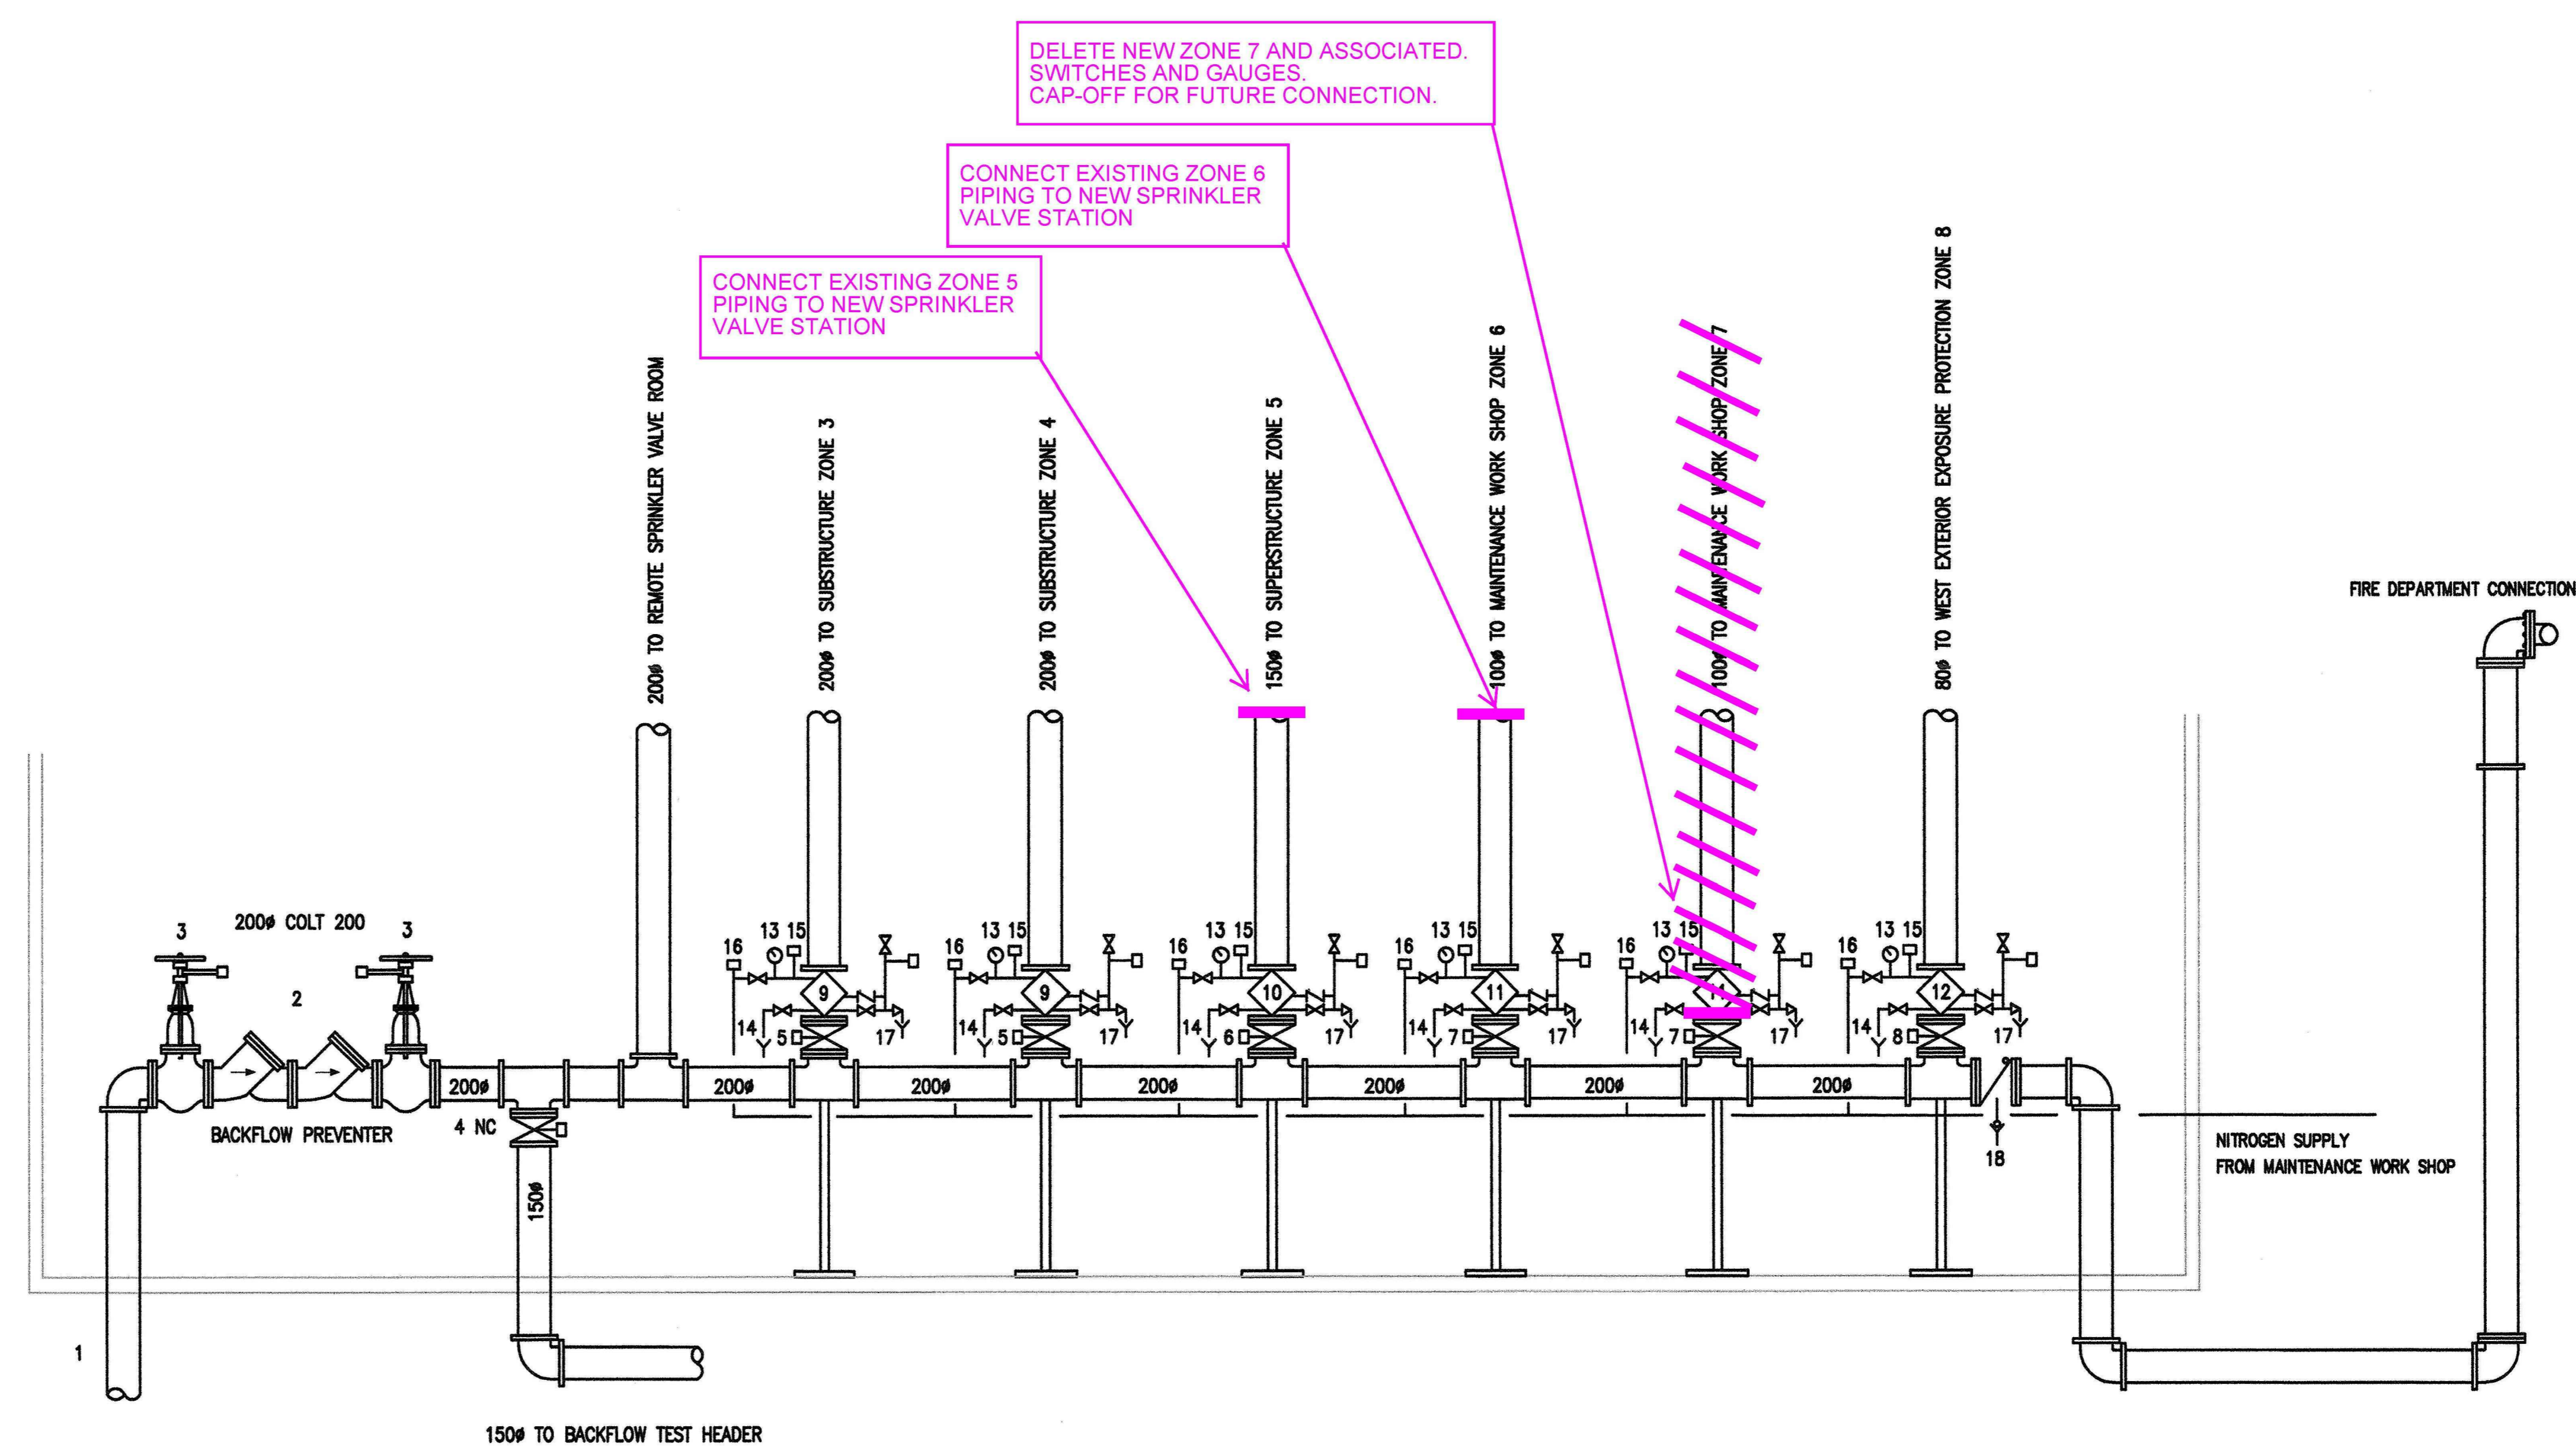

MAIN SPRINKLER VALVE STATION ASSEMBLY N.T.S.

1. 200# INCOMING WATER SUPPLY
2. 200# DOUBLE CHECK BACKFLOW PREVENTER
3. 200# OS&Y CONTROL VALVE C/W TAMPER SWITCH
4. 150# BUTTERFLY VALVE (NORMALLY CLOSED)
5. 200# BUTTERFLY VALVE C/W TAMPER SWITCH
6. 150# BUTTERFLY VALVE C/W TAMPER SWITCH
7. 100# BUTTERFLY VALVE C/W TAMPER SWITCH
8. 80# BUTTERFLY VALVE C/W TAMPER SWITCH
9. 200# DRY PIPE VALVE ASSEMBLY C/W QUICK-OPENING DEVICE
10. 150# DRY PIPE VALVE ASSEMBLY C/W QUICK-OPENING DEVICE
11. 100# DRY PIPE VALVE ASSEMBLY
12. 80# DRY PIPE VALVE ASSEMBLY
13. PRESSURE GAUGE
14. MAIN DRAIN
15. LOW PRESSURE WARNING SWITCH
16. AIR COMPRESSOR AUTOMATIC START SWITCH
17. RESTRICTING DRAIN
18. 100# CHECK VALVE C/W BALL DRIP

NOTE : ALL WATER FLOW DEVICES AND TAMPER SWITCHES MUST BE MONITORED TO THE ANNUNCIATOR PANEL BY DIVISION 16.