


COMPONENT LIST FOR 1100 SERIES ENGINE CONTROL PANELS

ITEM	DESCRIPTION	MANUFACTURER	MODEL#	REMARKS
F1	Panel Supply Fuse	Buss	ABC	10A
F2	Lamp Test Fuse	Buss	ABC	10A
F3	Crankcase Exhaust Motor Fuse	Buss	KTK	15A
PB1	START P.B.	CUTLER HAMMER	E22PGCO	GREEN
PB2	STOP P.B.	CUTLER HAMMER	E22PRCO	RED
PB3	EMERGENCY STOP PB	CUTLER HAMMER	E22GBRC6	RED
PB4	INTENTIONAL STOP RESET P.B.	CUTLER HAMMER	E22PBC8	BLACK
PB5	ALARM RESET P.B.	CUTLER HAMMER	E22PVC1	BLUE
SSW1	LOCAL/REMOTE SEL. SWITCH	CUTLER HAMMER	E22VAM2AC29C9	
SS1	SPEED SWITCH	NORIS	RU46.5	150 RPM
SS2	SPEED SWITCH	NORIS	RU46.5	1050 RPM
SS3	SPEED SWITCH	NORIS	RU46.5	350 RPM
SS4	SPEED SWITCH	NORIS	RU46.5	750 RPM
M1	CRANKCASE EXHAUST MOTOR STARTER	MTE	01/410/60/120	
ETM	ENGINE OPERATION HOURS COUNTER	CROMPTON	077-156A-PNZH	0-99999.9
PL1	"REMOTE CONTROL" INDICATOR	CUTLER HAMMER	E22TAP120	AMBER
PL2	"LOCAL CONTROL" INDICATOR	CUTLER HAMMER	E22TAP120	AMBER
PL3	"ENGINE RUNNING" INDICATOR	CUTLER HAMMER	E22TRP120	GREEN
PL4	"OVERSPEED" ALARM INDICATOR	CUTLER HAMMER	E22TRP120	RED
PL5	"OVERCRANK" ALARM INDICATOR	CUTLER HAMMER	E22TRP120	RED
PL6	"HIGH LUB OIL TEMPERATURE" INDICATOR	CUTLER HAMMER	E22TRP120	RED
PL7	"HIGH JACKET WATER TEMPERATURE" INDICATOR	CUTLER HAMMER	E22TRP120	RED
PL8	"CRANKCASE EXHAUST MOTOR FAILURE" INDICATOR	CUTLER HAMMER	E22TRP120	RED
PL9	"LOW LUB OIL PRESSURE ALARM" INDICATOR	CUTLER HAMMER	E22TRP120	RED
PL10	"LOCKOUT ACTIVATED ALARM" INDICATOR	CUTLER HAMMER	E22TRP120	RED
T1	CRANK TIMER	AGASTAT	SSC12ADA	2-60SEC
T2	REST TIMER	AGASTAT	SSC12ADA	2-60SEC
T3	OVERCRANK TIMER	AGASTAT	SSC12AEA	2SEC-120SEC
T4	COOLDOWN TIMER	AGASTAT	SSC12AMA	30SEC-15MIN
T5	STOP-SOLENOID HOLD-IN TIMER	AGASTAT	SSC12ACA	1-30SEC

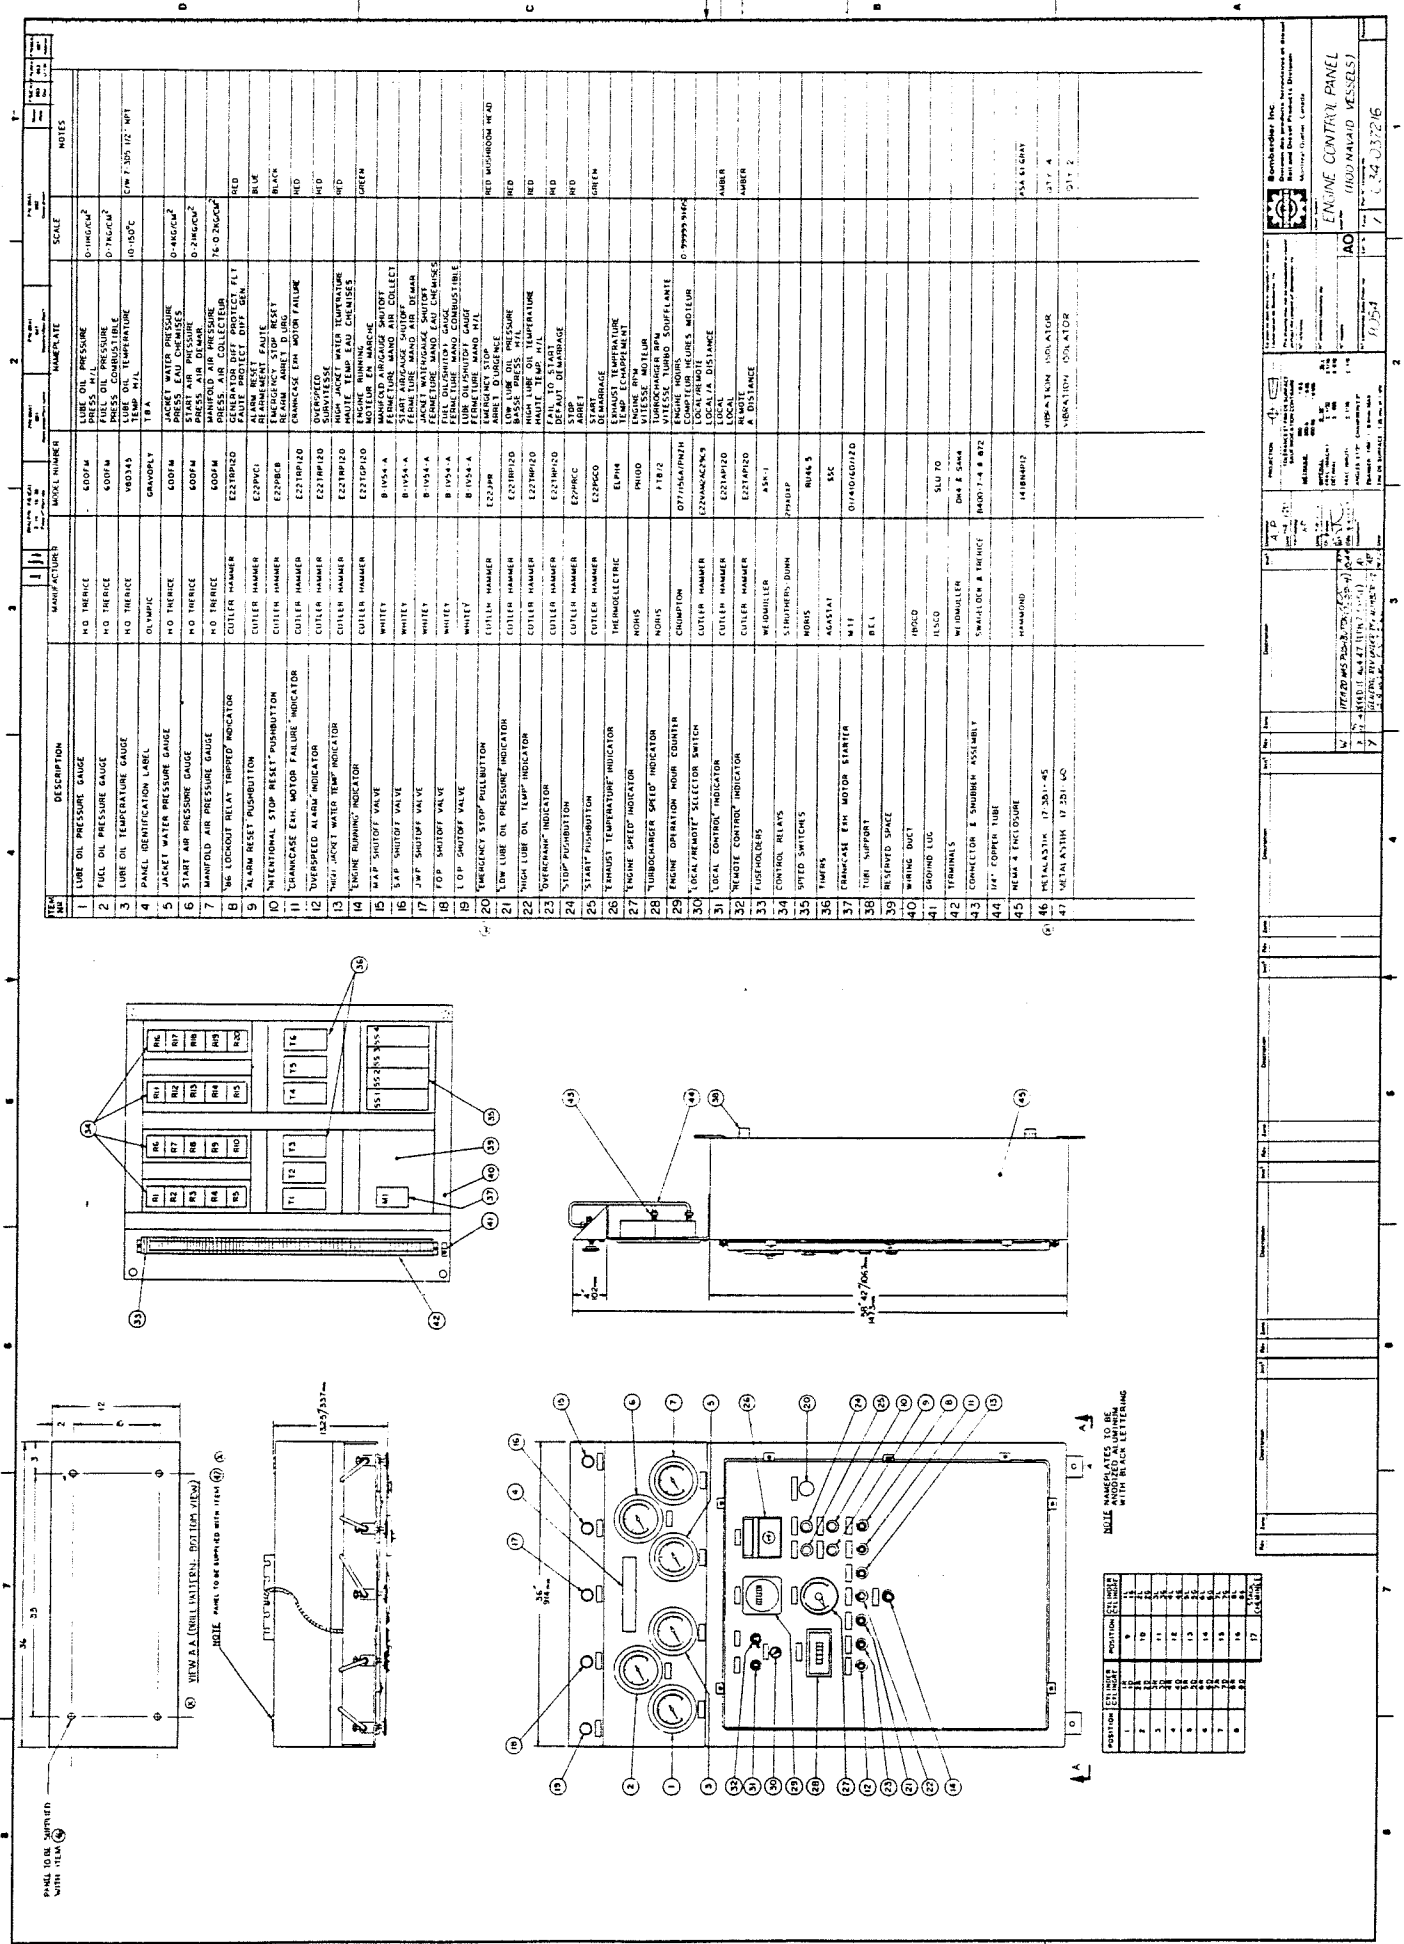

ENGINE CONTROL PANEL
 (SEE INSTRUCTIONS FOR DETAILS)
 100 037216