

RETURN BIDS TO:
RETOURNER LES SOUMISSIONS À:
Bid Receiving - PWGSC / Réception des soumissions
- TPSGC
11 Laurier St./11 rue Laurier
Place du Portage, Phase III
Core 0A1 / Noyau 0A1
Gatineau, Québec K1A 0S5

SOLICITATION AMENDMENT MODIFICATION DE L'INVITATION

The referenced document is hereby revised; unless otherwise indicated, all other terms and conditions of the Solicitation remain the same.

Ce document est par la présente révisé; sauf indication contraire, les modalités de l'invitation demeurent les mêmes.

Comments - Commentaires

This document contains a security requirement

Vendor/Firm Name and Address

Raison sociale et adresse du
fournisseur/de l'entrepreneur

Issuing Office - Bureau de distribution

Construction Services Division/Division des services de
construction
11 Laurier St./11 Rue Laurier
3C2, Place du Portage
Phase III
Gatineau, Québec K1A 0S5

Title - Sujet Workplace 2.0 Fit-Up	
Solicitation No. - N° de l'invitation EP777-151076/A	Amendment No. - N° modif. 004
Client Reference No. - N° de référence du client 20151076	Date 2014-11-05
GETS Reference No. - N° de référence de SEAG PW-\$\$\$FG-248-65865	
File No. - N° de dossier fg248.EP777-151076	CCC No./N° CCC - FMS No./N° VME
Solicitation Closes - L'invitation prend fin at - à 02:00 PM on - le 2014-11-13	Time Zone Fuseau horaire Eastern Standard Time EST
F.O.B. - F.A.B. Plant-Usine: <input type="checkbox"/> Destination: <input type="checkbox"/> Other-Autre: <input type="checkbox"/>	
Address Enquiries to: - Adresser toutes questions à: Roy, Micheline	Buyer Id - Id de l'acheteur fg248
Telephone No. - N° de téléphone (819) 956-0663 ()	FAX No. - N° de FAX (819) 956-8335
Destination - of Goods, Services, and Construction: Destination - des biens, services et construction: Blackburn Building 85 Sparks Street, 3rd Floor Ottawa, Ontario	

Instructions: See Herein

Instructions: Voir aux présentes

Delivery Required - Livraison exigée	Delivery Offered - Livraison proposée
Vendor/Firm Name and Address Raison sociale et adresse du fournisseur/de l'entrepreneur	
Telephone No. - N° de téléphone Facsimile No. - N° de télécopieur	
Name and title of person authorized to sign on behalf of Vendor/Firm (type or print) Nom et titre de la personne autorisée à signer au nom du fournisseur/ de l'entrepreneur (taper ou écrire en caractères d'imprimerie)	
Signature	Date

Solicitation No. - N° de l'invitation

EP777-151076/A

Amd. No. - N° de la modif.

004

Buyer ID - Id de l'acheteur

fg248

Client Ref. No. - N° de réf. du client

20151076

File No. - N° du dossier

fg248EP777-151076

CCC No./N° CCC - FMS No/ N° VME

**THIS AMENDMENT IS BEING RAISED TO ISSUE
ADDENDUM NO. 01**

ADDENDUM NO. 1

The following changes in the bid documents are effective immediately. This addendum will form part of the contract documents.

SPECIFICATION

- 1.1 Section 01 00 10 – General Instructions**
 - .1 **Add new article** Part 1.14.1. – Work Hours Restrictions **as follows:**
 - .1 Work to be performed between 7:00am and 6:00pm on weekdays and unrestricted hours on the weekend.
- 1.2 Section 02 82 00.01 - Asbestos Abatement – Minimum Precautions**
 - .1 Add section to contract documents, refer to attached documents.
- 1.3 Section 02 82 00.02 - Asbestos Abatement – Intermediate Precautions**
 - .1 Add section to contract documents, refer to attached documents.
- 1.4 Section 02 82 00.03 - Asbestos Abatement – Maximum Precautions**
 - .1 Add section to contract documents, refer to attached documents.
- 1.5 Section 06 40 00 – Architectural Woodwork**
 - .1 **Refer to Part 2.2.2.2 and replace with the following:**
 - .1 Softwood and poplar plywood DFP grade, bullnose edge, 16 mm thick. Plastic laminate finish to exposed and semi-exposed surfaces.
- 1.6 Section 06 47 00 – Plastic Laminate Finishing**
 - .1 **Refer to Part 2.1.1.3.1 and replace with the following:**
 - .1 PL-01: Arborite, 1403 CA, White Pearl Wood.
 - .2 **Refer to Part 2.1.1.3.2 and replace with the following:**
 - .1 PL-02: Arborite, W-445 CA, Afromosia Congo.
 - .3 **Delete Part 2.1.1.3.3 entirely.**
 - .4 **Delete Part 2.1.1.3.4 entirely.**
- 1.7 Section 07 21 16 – Blanket Insulation**
 - .1 **Refer to Part 2.2.1 and replace with the following:**
 - .1 Glass fibre acoustic blanket insulation and/or acoustical blanket mineral fibre insulation **(BI-01)**: to CAN/ULC S702.
 - .1 Type 1.
 - .2 Size: To suit stud spacing.
 - .3 Thickness: As indicated on drawings.
 - .4 Combustibility to CAN4-S114: Non-combustible.
 - .5 Surface Burning Characteristics to CAN/ULC-S102:
 - .1 Flame Spread: 0
 - .2 Smoke Developed: 0
 - .6 Smoulder Resistance to CAN/ULC S129.
- 1.8 Section 07 81 00- Applied Fireproofing**
 - .1 Add Section to contract documents, refer to attached documents.

1.9 Section 09 65 16 – Resilient Sheet Flooring

.1 Refer to Part 2.1.1.5.1 and replace with the following:

.1 RT-01 (Kitchen Flooring): Armstrong Medley, Style - H8681, Colour – Touch Stone.

.2 Refer to Part Part 2.1.1.5.2 and replace with the following:

.1 RT-02 (Kitchen Flooring Accent): Armstrong Medley, Style - H8681, Colour – Shrinking Violet.

1.10 Section 09 65 19 – Resilient Tile Flooring

.1 Delete Part 2.1.1 entirely.

.2 Refer to Part 2.1.1.1.1 and replace with the following:

.1 RB-01: Armstrong Hedley, Integrated Wall Base, Colour – 69 Light Grey.

.3 Delete Part 2.1.1.1.2 entirely.

1.11 Section 09 68 13– Tile Carpeting

.1 Refer to Part 2.3.1.1.1. (CT-01) and replace with the following:

.1 Tandus Flooring, Carpet Tile, Consequence 03724, Salt 43513.

.2 Refer to Part 2.3.2.1.1. (CT-02) and replace with the following:

.1 Tandus Flooring, Carpet Tile, Plexus Colour II 02875, Colour – Purple Haze 18543.

.3 Refer to Part 2.3.3.1.1. (CT-03) and replace with the following:

.1 Tandus Flooring, Carpet Tile, Plexus Colour II 02875, Colour – Swimming Pool 18557.

.4 Delete Part 2.3.4.1.1. (CT-04) entirely.

.5 Refer to Part 2.5.4 and replace with the following:

.1 Sub-floor leveler: cement based quick settling, self-levelling underlayment as recommended by flooring manufacturer for use with their product.

.6 Add the following Part 3.3.1.8:

.1 Apply sub-floor leveler throughout scope of work. Clean floor and apply filler; trowel and float to leave smooth, flat hard surface. Prohibit traffic until filler cured and dry.

1.12 Section 09 91 23 – Interior Painting

.1 Refer to Part 2.2.5.1.1. (PT-01) and replace with the following:

.1 Betonel/Dulux Paints, Colour – N.B.C. White 30GY 76/017.

.2 Refer to Part 2.2.5.2.1. (PT-02) and replace with the following:

.1 Betonel/Dulux Paints, Colour – Silhouette 70BB 40/062.

.3 Refer to Part 2.2.5.3.1. (PT-03) and replace with the following:

.1 Betonel/Dulux Paints, Colour – Forest Glen 90GG 40/115.

.4 Refer to Part 2.2.5.4.1. (PT-04) and replace with the following:

.1 Betonel/Dulux Paints, Colour – Romance 10BB 83/020.

.5 Refer to Part 2.2.5.5.1. (PT-05) and replace with the following:

.1 Betonel/Dulux Paints, Colour – Swordplay 30BB 45/049.

.6 Refer to Part 2.2.5.6.1. (PT-06) and replace with the following:

.1 Betonel/Dulux Paints, Colour – The Dark Side 30YY 05/044.

.7 Delete Part 2.2.5.7. (PT-07) entirely.

.8 Refer to Part 2.2.5.3.1. (ST-01) and replace with the following:

.1 Minwax Wood Finish, Ebony 2718.

1.13 Section 23 05 01 – Common Work Results for Mechanical

- .1 **Refer to Part 3.2.1 and replace with the following:**
 - .1 Clean interior and exterior of all systems including strainers. Vacuum interior of ductwork and air handling units on the third (3rd) floor only up to the core shafts.

DRAWINGS

1.1 A220 – FINISH FLOOR PLAN; GENERIC ACCENT PATTERN; ROOM FINISH SCHEDULE.

- .1 **Refer to drawing 1/A210 - Finish Floor Plan and replace with the following:**
 - .1 See attached drawing SK-A220.1 for revisions to the Elevator Lobby floor accent colours.
- .2 **Refer to schedule ROOM FINISH SCHEDULE and replace with the following:**
 - .1 See attached drawing SK-A220.1 for revisions to the room finish schedule.

1.2 A710 – DOOR/FRAME SCHEDULE; GLAZED FRAME SCHEDULE.

- .1 Door/Frame Schedule
 - .1 **Refer to Door Number - 00B and replace Frame Type to the following:**
 - .1 EXIST
 - .2 **Refer to Door Number - 02 and replace Frame Elevation to the following:**
 - .1 FE-03
 - .3 **Refer to Door Number - 12 and replace Frame Elevation to the following:**
 - .1 FE-03

END OF DOCUMENT

PART 1 GENERAL**1.1 RELATED SECTIONS**

- .1 02 82 00.02 – Asbestos Abatement - Intermediate Precautions
- .2 02 82 00.03 – Asbestos Abatement – Maximum Precautions

1.2 REFERENCES

- .1 Department of Justice Canada (Jus)
 - .1 Canadian Environmental Protection Act, 1999 (CEPA).
- .2 Transport Canada (TC)
 - .1 Transportation of Dangerous Goods Act, 1992 (TDGA).

1.3 DEFINITIONS

- .1 HEPA vacuum: High Efficiency Particulate Air filtered vacuum equipment with filter system capable of collecting and retaining fibres greater than 0.3 microns in any direction at 99.97% efficiency.
- .2 Amended Water: water with nonionic surfactant wetting agent added to reduce water tension to allow thorough wetting of fibres.
- .3 Asbestos-Containing Materials (ACMs): materials that contain 0.5 per cent or more asbestos by dry weight and are identified under Existing Conditions including fallen materials and settled dust.
- .4 Asbestos Work Area: area where work takes place which will, or may, disturb ACMs.
- .5 Authorized Visitors: Engineers, Consultants or designated representatives, and representatives of regulatory agencies.
- .6 Competent worker: in relation to specific work, means a worker who:
 - .1 Is qualified because of knowledge, training and experience to perform the work.
 - .2 Is familiar with the provincial and federal laws and with the provisions of the regulations that apply to the work.
 - .3 Has knowledge of all potential or actual danger to health or safety in the work.
- .7 Friable material: means material that:
 - .1 When dry, can be crumbled, pulverized or powdered by hand pressure, or
 - .2 is crumbled, pulverized or powdered.
- .8 Non-Friable Material: material that when dry cannot be crumbled, pulverized or powdered by hand pressure.
- .9 Occupied Area: any area of the building or work site that is outside Asbestos Work Area.
- .10 Polyethylene: polyethylene sheeting or rip-proof polyethylene sheeting with tape along edges, around penetrating objects, over cuts and tears, and elsewhere as required to provide protection and isolation.
- .11 Sprayer: garden reservoir type sprayer or airless spray equipment capable of producing mist or fine spray. Must have appropriate capacity for work.

1.4 SUBMITTALS

- .1 Submittals in accordance with Section 01 33 00 - Submittal Procedures.

- .2 Submit proof satisfactory to Departmental Representative, Engineer or Consultant that suitable arrangements have been made to dispose of asbestos-containing waste in accordance with requirements of authority having jurisdiction.
- .3 Submit Provincial/Territorial and/or local requirements for Notice of Project Form.
- .4 Submit proof of Contractor's Asbestos Liability Insurance.
- .5 Submit to Departmental Representative, Engineer or Consultant necessary permits for transportation and disposal of asbestos-containing waste and proof that asbestos-containing waste has been received and properly disposed.
- .6 Submit proof that all asbestos workers and/or supervisor have received appropriate training and education by a competent person in the hazards of asbestos exposure, good personal hygiene and work practices while working in Asbestos Work Areas, and the use, cleaning and disposal of respirators and protective clothing.
- .7 Submit proof satisfactory to Departmental Representative, Engineer or Consultant that employees have respirator fitting and testing. Workers must be fit tested (irritant smoke test) with respirator that is personally issued.

1.5 QUALITY ASSURANCE

- .1 Regulatory Requirements: comply with Federal, Provincial/Territorial, and local requirements pertaining to asbestos, provided that in case of conflict among these requirements or with these specifications, more stringent requirement applies. Comply with regulations in effect at time Work is performed.
- .2 Health and Safety:
 - .1 Perform construction occupational health and safety in accordance with Section 01 35 30 - Health and Safety Requirements.
 - .2 Safety Requirements: worker protection.
 - .1 Protective equipment and clothing to be worn by workers while in Asbestos Work Area include:
 - .1 Air purifying half-mask/respirator with N-100, R-100 or P-100 particulate filter, personally issued to worker and marked as to efficiency and purpose, suitable for protection against asbestos and acceptable to Provincial Authority having jurisdiction. The respirator to be fitted so that there is an effective seal between the respirator and the worker's face, unless the respirator is equipped with a hood or helmet. The respirator to be cleaned, disinfected and inspected after use on each shift, or more often if necessary, when issued for the exclusive use of one worker, or after each use when used by more than one worker. The respirator to have damaged or deteriorated parts replaced prior to being used by a worker; and, when not in use, to be stored in a convenient, clean and sanitary location. The employer to establish written procedures regarding the selection, use and care of respirators, and a copy of the procedures to be provided to and reviewed with each worker who is required to wear a respirator. A worker not to be assigned to an operation requiring the use of a respirator unless he or she is physically able to perform the operation while using the respirator.
 - .2 Disposable-type protective clothing that does not readily retain or permit penetration of asbestos fibres. Protective clothing to be provided by the employer and worn by every worker who enters the work area, and the protective clothing shall consist of a head covering and full body covering that fits snugly at the ankles, wrists and neck, in order to prevent asbestos fibres from reaching the garments and skin under the protective clothing to include suitable footwear, and to be repaired or replaced if torn.
 - .2 Eating, drinking, chewing, and smoking are not permitted in Asbestos Work Area.
 - .3 Before leaving Asbestos Work Area, the worker can decontaminate his or her protective clothing by using a vacuum equipped with a HEPA filter, or by damp wiping, before removing the protective clothing, or, if the protective clothing will not be reused, place it in a container for dust and waste. The container to be dust tight, suitable for asbestos waste, impervious to asbestos, identified as asbestos waste, cleaned with a damp cloth

or a vacuum equipped with a HEPA filter immediately before removal from the work area, and removed from the work area frequently and at regular intervals.

- .4 Facilities for washing hands and face shall be provided within or close to the Asbestos Work Area.
- .5 Ensure workers wash hands and face when leaving Asbestos Work Area. Facilities for washing are located as indicated on drawings.
- .6 Ensure that no person required to enter an Asbestos Work Area has facial hair that affects seal between respirator and face.

1.6 WASTE MANAGEMENT AND DISPOSAL

- .1 Refer to Section 01 00 10 – General Instructions.

1.7 EXISTING CONDITIONS

- .1 Reports and information pertaining to ACMs to be handled, removed, or otherwise disturbed and disposed of during this project are bound into this specification package.
- .2 Notify Departmental Representative, Engineer or Consultant of friable material discovered during Work and not apparent from drawings, specifications, or report pertaining to Work. Do not disturb such material pending instructions from Departmental Representative, Engineer or Consultant.

1.8 SCHEDULING

- .1 Refer to Section 01 00 10 – General Instructions.

1.9 OWNER'S INSTRUCTIONS

- .1 Before beginning Work, provide Departmental Representative, Engineer or Consultant satisfactory proof that every worker has had instruction and training in hazards of asbestos exposure, in personal hygiene and work practices, and in use, cleaning, and disposal of respirators and protective clothing.
- .2 Instruction and training related to respirators includes, following minimum requirements:
 - .1 Fitting of equipment.
 - .2 Inspection and maintenance of equipment.
 - .3 Disinfecting of equipment.
 - .4 Limitations of equipment.
- .3 Instruction and training must be provided by a competent, qualified person.

PART 2 PRODUCTS

2.1 MATERIALS

- .1 Drop Sheets:
 - .1 Polyethylene: 0.15 mm thick.
 - .2 FR polyethylene: 0.15 mm thick woven fibre reinforced fabric bonded both sides with polyethylene.
- .2 Wetting Agent: 50% polyoxyethylene ester and 50% polyoxyethylene ether mixed with water in a concentration to provide thorough wetting of asbestos-containing material.
- .3 Waste Containers: contain waste in two separate containers.
 - .1 Inner container: 0.15 mm thick sealable polyethylene waste bag.
 - .2 Outer container: sealable metal or fibre type where there are sharp objects included in waste material; otherwise outer container may be sealable metal or fibre type or second 0.15 mm thick sealable polyethylene bag.

- .3 Labelling requirements: affix pre-printed cautionary asbestos warning in both official languages that is visible when ready for removal to disposal site.
- .4 Slow - drying sealer: non-staining, clear, water - dispersible type that remains tacky on surface for at least 8 hours and designed for purpose of trapping residual asbestos fibres.
- .5 Tape: fibreglass - reinforced duct tape suitable for sealing polyethylene under both dry conditions and wet conditions using amended water.

PART 3 EXECUTION

3.1 PROCEDURES

- .1 Do construction occupational health and safety in accordance with Section 01 35 30 - Health and Safety Requirements.
- .2 Before beginning Work, isolate Asbestos Work Area using, minimum, preprinted cautionary asbestos warning signs in both official languages that are visible at access routes to Asbestos Work Area.
 - .1 Remove visible dust from surfaces in the work area where dust is likely to be disturbed during course of work.
 - .2 Use HEPA vacuum or damp cloths where damp cleaning does not create a hazard and is otherwise appropriate.
 - .3 Do not use compressed air to clean up or remove dust from any surface.
- .3 Prevent spread of dust from Asbestos Work Area using measures appropriate to work to be done.
 - .1 Use FR polyethylene drop sheets over flooring such as carpeting that absorbs dust and over flooring in Asbestos Work Area where dust and contamination cannot otherwise be safely contained. Drop sheets are not to be reused.
- .4 Wet materials containing asbestos to be cut, ground, abraded, scraped, drilled, or otherwise disturbed unless wetting creates hazard or causes damage.
 - .1 Use garden reservoir type low - velocity fine - mist sprayer.
 - .2 Perform Work to reduce dust creation to lowest levels practicable.
 - .3 Work will be subject to visual inspection and air monitoring.
 - .4 Contamination of surrounding areas indicated by visual inspection or air monitoring will require complete enclosure and clean-up of affected areas.
- .5 Frequently and at regular intervals during Work and immediately on completion of work:
 - .1 Dust and waste to be cleaned up and removed using a vacuum equipped with a HEPA filter, or by damp mopping or wet sweeping, and placed in a waste container, and
 - .2 Drop sheets to be wetted and placed in a waste container as soon as practicable.
- .6 Cleanup:
 - .1 Place dust and asbestos containing waste in sealed dust-tight waste bags. Treat drop sheets and disposable protective clothing as asbestos waste; wet and fold these items to contain dust, and then place in plastic bags.
 - .2 Clean exterior of each waste-filled bag using damp cloths or HEPA vacuum and place in second, clean waste bag immediately prior to removal from Asbestos Work Area.
 - .3 Seal waste bags and remove from site. Dispose of in accordance with requirements of Provincial/Territorial and Federal Authority having jurisdiction. Supervise dumping and ensure that dump operator is fully aware of hazardous nature of material to be dumped and that the appropriate guidelines and regulations for asbestos disposal are followed.
 - .4 Perform final thorough clean-up of Work areas and adjacent areas affected by Work using HEPA vacuum.

END OF SECTION

PART 1 GENERAL**1.1 RELATED SECTIONS**

- .1 02 82 00.01 – Asbestos Abatement – Minimum Precautions
- .2 02 82 00.03 – Asbestos Abatement – Maximum Precautions

1.2 REFERENCES

- .3 Department of Justice Canada (Jus)
 - .1 Canadian Environmental Protection Act, 1999 (CEPA).
- .4 Health Canada/Workplace Hazardous Materials Information System (WHMIS)
 - .1 Material Safety Data Sheets (MSDS).
- .5 Transport Canada (TC)
 - .1 Transportation of Dangerous Goods Act, 1992 (TDGA).
- .6 Underwriters' Laboratories of Canada (ULC)

1.3 DEFINITIONS

- .1 Amended Water: water with non-ionic surfactant wetting agent added to reduce water tension to allow wetting of fibres.
- .1 Asbestos Containing Materials (ACMs): materials that contain 0.5 per cent or more asbestos by dry weight and are identified under Existing Conditions including fallen materials and settled dust.
- .2 Asbestos Work Area: area where work takes place which will, or may disturb ACMs.
- .3 Authorized Visitors: Engineers, or designated representatives, and representatives of regulatory agencies.
- .4 Competent worker: in relation to specific work, means a worker who:
 - .1 Is qualified because of knowledge, training and experience to perform the work.
 - .2 Is familiar with the provincial and federal laws and with the provisions of the regulations that apply to the work.
 - .3 Has knowledge of all potential or actual danger to health or safety in the work.
- .5 Friable Materials: material that when dry can be crumbled, pulverized or powdered by hand pressure and includes such material that is crumbled, pulverized or powdered.
- .6 Glove Bag: prefabricated glove bag as follows:
 - .1 Minimum thickness 0.25 mm (10 mil) polyvinyl-chloride bag.
 - .2 Integral 0.25 mm (10 mil) thick polyvinyl-chloride gloves and elastic ports.
 - .3 Equipped with reversible double pull double throw zipper on top and at approximately mid-section of the bag.
 - .4 Straps for sealing ends around pipe.
- .7 HEPA vacuum: High Efficiency Particulate Air filtered vacuum equipment with filter system capable of collecting and retaining fibres greater than 0.3 microns in any dimension at 99.97% efficiency.
- .8 Non-Friable Material: material that when dry cannot be crumbled, pulverized or powdered by hand pressure.

- .9 Occupied Area: any area of building or work site that is outside Asbestos Work Area.
- .10 Polyethylene: polyethylene sheeting or rip-proof polyethylene sheeting with tape along edges, around penetrating objects, over cuts and tears, and elsewhere as required to provide protection and isolation.
- .11 Sprayer: garden reservoir type sprayer or airless spray equipment capable of producing mist or fine spray. Must have appropriate capacity for scope of work.

1.4 SUBMITTALS

- .1 Submittals in accordance with Section 01 33 00 - Submittal Procedures.
- .2 Submit proof satisfactory to Departmental Representative, Engineer or Consultant that suitable arrangements have been made to dispose of asbestos containing waste in accordance with requirements of authority having jurisdiction.
- .3 Submit Provincial/Territorial and/or local requirements for Notice of Project Form.
- .4 Submit proof of Contractor's Asbestos Liability Insurance.
- .5 Submit to Departmental Representative, Engineer or Consultant necessary permits for transportation and disposal of asbestos containing waste and proof that asbestos containing waste has been received and properly disposed.
- .6 Submit proof satisfactory to Departmental Representative, Engineer or Consultant that all asbestos workers have received appropriate training and education by a competent person in the hazards of asbestos exposure, good personal hygiene, entry and exit from Asbestos Work Area, aspects of work procedures and protective measures while working in Asbestos Work Areas, and the use, cleaning and disposal of respirators and protective clothing.
- .7 Submit proof that supervisory personnel have attended asbestos abatement course, of not less than two days duration, approved by Departmental Representative, Engineer or Consultant. Minimum of one supervisor for every ten workers.
- .8 Submit Worker's Compensation Board status and transcription of insurance.
- .9 Submit documentation including test results, fire and flammability data, and Material Safety Data Sheets (MSDS) for chemicals or materials including:
 - .1 Encapsulants;
 - .2 Amended water;
- .10 Submit proof satisfactory to Departmental Representative, Engineer or Consultant that employees have respirator fitting and testing. Workers must be fit tested (irritant smoke test) with respirator that is personally issued.

1.5 QUALITY ASSURANCE

- .1 Regulatory Requirements: comply with Federal, Provincial/Territorial and local requirements pertaining to asbestos, provided that in case of conflict among these requirements or with these specifications more stringent requirement applies. Comply with regulations in effect at the time work is performed.
- .2 Health and Safety:
 - .1 Do construction occupational health and safety in accordance with Section 01 35 30 - Health and Safety Requirements.
 - .2 Safety Requirements: worker and visitor protection.
 - .1 Protective equipment and clothing to be worn by workers while in Asbestos Work Area include:
 - .1 Air purifying half-mask respirator with N-100, R-100 or P-100 particulate filter, personally issued to worker and marked as to efficiency and purpose, suitable for

protection against asbestos and acceptable to Provincial Authority having jurisdiction. The respirator to be fitted so that there is an effective seal between the respirator and the worker's face, unless the respirator is equipped with a hood or helmet. The respirator to be cleaned, disinfected and inspected after use on each shift, or more often if necessary, when issued for the exclusive use of one worker, or after each use when used by more than one worker. The respirator to have damaged or deteriorated parts replaced prior to being used by a worker; and, when not in use, to be stored in a convenient, clean and sanitary location. The employer to establish written procedures regarding the selection, use and care of respirators, and a copy of the procedures to be provided to and reviewed with each worker who is required to wear a respirator. A worker not to be assigned to an operation requiring the use of a respirator unless he or she is physically able to perform the operation while using the respirator.

- .2 Disposable type protective clothing that does not readily retain or permit penetration of asbestos fibres. Protective clothing to be provided by the employer and worn by every worker who enters the work area, and the protective clothing to consist of a head covering and full body covering that fits snugly at the ankles, wrists and neck, in order to prevent asbestos fibres from reaching the garments and skin under the protective clothing. It includes suitable footwear, and it to be repaired or replaced if torn.
- .3 Eating, drinking, chewing, and smoking are not permitted in Asbestos Work Area.
- .4 Before leaving Asbestos Work Area, the worker can decontaminate his or her protective clothing by using a vacuum equipped with a HEPA filter, or by damp wiping, before removing the protective clothing, or, if the protective clothing will not be reused, place it in a container for dust and waste. The container to be dust tight, suitable for asbestos waste, impervious to asbestos, identified as asbestos waste, cleaned with a damp cloth or a vacuum equipped with a HEPA filter immediately before removal from the work area, and removed from the work area frequently and at regular intervals.
- .5 Ensure workers wash hands and face when leaving Asbestos Work Area. Facilities for washing are located as indicated on drawings.
- .6 Ensure that no person required to enter an Asbestos Work Area has facial hair that affects seal between respirator and face.
- .7 Visitor Protection:
 - .1 Provide protective clothing and approved respirators to Authorized Visitors to work areas.
 - .2 Instruct Authorized Visitors in the use of protective clothing, respirators and procedures.
 - .3 Instruct Authorized Visitors in proper procedures to be followed in entering into and exiting from Asbestos Work Area.

1.6 WASTE MANAGEMENT AND DISPOSAL

- .1 Refer to Section 01 00 10 – General Instructions.

1.7 EXISTING CONDITIONS

- .1 Reports and information pertaining to ACMs to be handled, removed, or otherwise disturbed and disposed of during this Project are bound into this specification package.
- .2 Notify Departmental Representative, Engineer or Consultant of friable material discovered during Work and not apparent from drawings, specifications, or report pertaining to Work. Do not disturb such material until instructed by Departmental Representative, Engineer or Consultant.

1.8 SCHEDULING

- .1 Refer to Section 01 00 10 – General Instructions.

1.9 OWNER'S INSTRUCTIONS

- .1 Before beginning Work, provide Departmental Representative, Engineer or Consultant satisfactory proof that every worker has had instruction and training in hazards of asbestos exposure, in personal hygiene and work practices, in use of glove bag procedures, and in use, cleaning, and disposal of respirators and protective clothing.
- .2 Instruction and training related to respirators includes, at minimum:
 - .1 Fitting of equipment.
 - .2 Inspection and maintenance of equipment.
 - .3 Disinfecting of equipment.
 - .4 Limitations of equipment.
- .3 Instruction and training must be provided by competent, qualified person.

PART 2 PRODUCTS

2.1 MATERIALS

- .1 Drop and Enclosure Sheets:
 - .1 Polyethylene: 0.15 mm thick.
 - .2 FR polyethylene: 0.15 mm thick woven fibre reinforced fabric bonded both sides with polyethylene.
- .2 Wetting Agent: 50% polyoxyethylene ester and 50% polyoxyethylene ether mixed with water in concentration to provide thorough wetting of asbestos containing material.
- .3 Waste Containers: contain waste in two separate containers.
 - .1 Inner container: 0.15 mm thick sealable polyethylene bag or where glove bag method is used, glove bag itself.
 - .2 Outer container: sealable metal or fibre type where there are sharp objects included in waste material; otherwise outer container may be sealable metal or fibre type or second 0.15 mm thick sealable polyethylene bag.
 - .3 Labelling requirements: affix preprinted cautionary asbestos warning, in both official languages, that is visible when ready for removal to disposal site.
- .4 Glove bag:
 - .1 Acceptable materials: safe-T-Strip products in configuration suitable for Work, or Alternative material approved by addendum during tendering period in accordance with Instructions to Tenderers.
 - .2 The glove bag to be equipped with:
 - .1 Sleeves and gloves that are permanently sealed to the body of the bag to allow the worker to access and deal with the insulation and maintain a sealed enclosure throughout the work period.
 - .2 Valves or openings to allow insertion of a vacuum hose and the nozzle of a water sprayer while maintaining the seal to the pipe, duct or similar structure.
 - .3 A tool pouch with a drain.
 - .4 A seamless bottom and a means of sealing off the lower portion of the bag.
 - .5 A high strength double throw zipper and removable straps, if the bag is to be moved during the removal operation.
- .5 Tape: tape suitable for sealing polyethylene to surfaces under both dry and wet conditions using amended water.
- .6 Slow - drying sealer: non-staining, clear, water - dispersible type that remains tacky on surface for at least 8 hours and designed for purpose of trapping residual asbestos fibres.

PART 3 EXECUTION**3.1 SUPERVISION**

- .1 Minimum of one Supervisor for every ten workers is required.
- .2 Approved Supervisor must remain within Asbestos Work Area during disturbance, removal, or other handling of asbestos-containing materials.

3.2 PROCEDURES


- .1 Do construction occupational health and safety in accordance with Section 01 35 30 - Health and Safety Requirements.
- .2 Before beginning Work, at each access to Asbestos Work Area, install warning signs in both official languages in upper case 'Helvetica Medium' letters reading as follows, where number in parentheses indicates font size to be used: 'CAUTION ASBESTOS HAZARD AREA (25 mm) / NO UNAUTHORIZED ENTRY (19 mm) / WEAR ASSIGNED PROTECTIVE EQUIPMENT (19 mm) / BREATHING ASBESTOS DUST MAY CAUSE SERIOUS BODILY HARM (7 mm)'.
 - .1 Use HEPA vacuum or damp cloths where damp cleaning does not create hazard and is otherwise appropriate.
 - .2 Do not use compressed air to clean up or remove dust from any surface.
- .3 Before beginning Work remove visible dust from surfaces in work area where dust is likely to be disturbed during course of work.
 - .1 Use FR polyethylene drop sheets over flooring such as carpeting that absorbs dust and over flooring in work areas where dust or contamination cannot otherwise be safely contained.
 - .2 When removing suspended ceilings and walls themselves do not enclose work area and when removing asbestos containing material from piping or equipment and "glove bag" method is not used erect enclosure of polyethylene sheeting around work area, shut off mechanical ventilation system serving work area and seal ventilation ducts to and from work area.
- .5 Before removing suspended ceilings, remove friable material on upper surfaces using HEPA vacuum equipment.
 - .1 Remove and clean surfaces of ceiling panels using HEPA vacuum, wrap clean panels in 0.10 mm thick polyethylene, and store in building as directed by Departmental Representative, Engineer or Consultant.
 - .2 Clean "T" grid suspension system, disconnect, wrap in 0.10 mm thick polyethylene, and store in building as directed by Engineer.
- .6 Remove loose material by HEPA vacuum; thoroughly wet friable material containing asbestos to be removed or disturbed before and during Work unless wetting creates hazard or causes damage.
 - .1 Use garden reservoir type low - velocity sprayer or airless spray equipment capable of producing mist or fine spray.
 - .2 Perform Work in a manner to reduce dust creation to lowest levels practicable.
- .7 Pipe Insulation Removal Using Glove Bag:
 - .1 A glove bag not to be used to remove insulation from a pipe, duct or similar structure if:
 - .1 It may not be possible to maintain a proper seal for any reason including, without limitation:
 - .1 The condition of the insulation.
 - .2 The temperature of the pipe, duct or similar structure.
 - .2 The bag could become damaged for any reason including, without limitation.

- .1 The type of jacketing.
- .2 The temperature of the pipe, duct or similar structure.
- .2 Upon installation of the glove bag, inspect bag for any damage or defects. If any damage or defects are found, the glove bag is to be repaired or replaced. The glove bag to be inspected at regular intervals for damage and defects, and repair or replaced, as appropriately. The asbestos containing contents of the damaged or defective glove bag found during removal are to be wetted and the glove bag and its contents are to be removed and disposed of in an appropriate waste disposal container. Any damaged or defective glove bags are not be reused.
- .3 Place tools necessary to remove insulation in tool pouch. Wrap bag around pipe and close zippers. Seal bag to pipe with cloth straps.
- .4 Place hands in gloves and use necessary tools to remove insulation. Arrange insulation in bag to obtain full capacity of bag.
- .5 Insert nozzle of garden reservoir type sprayer into bag through valve and wash down pipe and interior of bag thoroughly. Wet surface of insulation in lower section of bag.
- .6 To remove bag after completion of stripping, wash top section and tools thoroughly. Remove air from top section through elasticized valve using a HEPA vacuum. Pull polyethylene waste container over glove bag before removing from pipe. Release one strap and remove freshly washed tools. Place tools in water. Remove second strap and zipper. Fold over into waste container and seal.
- .7 After removal of bag ensure that pipe is free of residue. Remove residue using HEPA vacuum or wet cloths. Ensure that surfaces are free of sludge which after drying could release asbestos dust into atmosphere. Seal exposed surfaces of pipe and ends of insulation with slow drying sealer to seal in any residual fibres.
- .8 Upon completion of Work shift, cover exposed ends of remaining pipe insulation with polyethylene taped in place.
- .8 Work is subject to visual inspection and air monitoring. Contamination of surrounding areas indicated by visual inspection or air monitoring will require complete enclosure and clean-up of affected areas.
- .9 Cleanup:
 - .1 Frequently during Work and immediately after completion of work, clean up dust and asbestos containing waste using HEPA vacuum or by damp mopping.
 - .2 Place dust and asbestos containing waste in sealed dust tight waste bags. Treat drop sheets and disposable protective clothing as asbestos waste and wet and fold to contain dust and then place in waste bags.
 - .3 Immediately before their removal from Asbestos Work Area and disposal, clean each filled waste bag using damp cloths or HEPA vacuum and place in second clean waste bag.
 - .4 Seal and remove double bagged waste from site. Dispose of in accordance with requirements of Provincial/Territorial and Federal authority having jurisdiction. Supervise dumping and ensure that dump operator is fully aware of hazardous nature of material to be dumped and that guidelines and regulations for asbestos disposal are followed.
 - .5 Perform final thorough clean-up of Asbestos Work Areas and adjacent areas affected by Work using HEPA vacuum.

3.3 AIR MONITORING

- .1 From beginning of Work until completion of cleaning operations, Consultant to take air samples on daily basis outside of Asbestos Work Area enclosures in accordance with Provincial/Territorial Occupational Health and Safety Regulations and PWGSC requirements.
 - .1 Contractor will be responsible for monitoring inside enclosure in accordance with applicable Provincial/Territorial Occupational Health and Safety Regulations.
- .2 If air monitoring shows that areas outside Asbestos Work Area enclosures are contaminated, enclose, maintain and clean these areas in same manner as that applicable to Asbestos Work Area.
- .3 Ensure that respiratory safety factors are not exceeded.
- .4 During the course of Work, Consultant to measure fibre content of air outside Work areas by means of air samples analyzed by Phase Contrast Microscopy (PCM).
 - .1 Stop Work when PCM measurements exceed 0.05 f/cc and correct procedures.

END OF SECTION

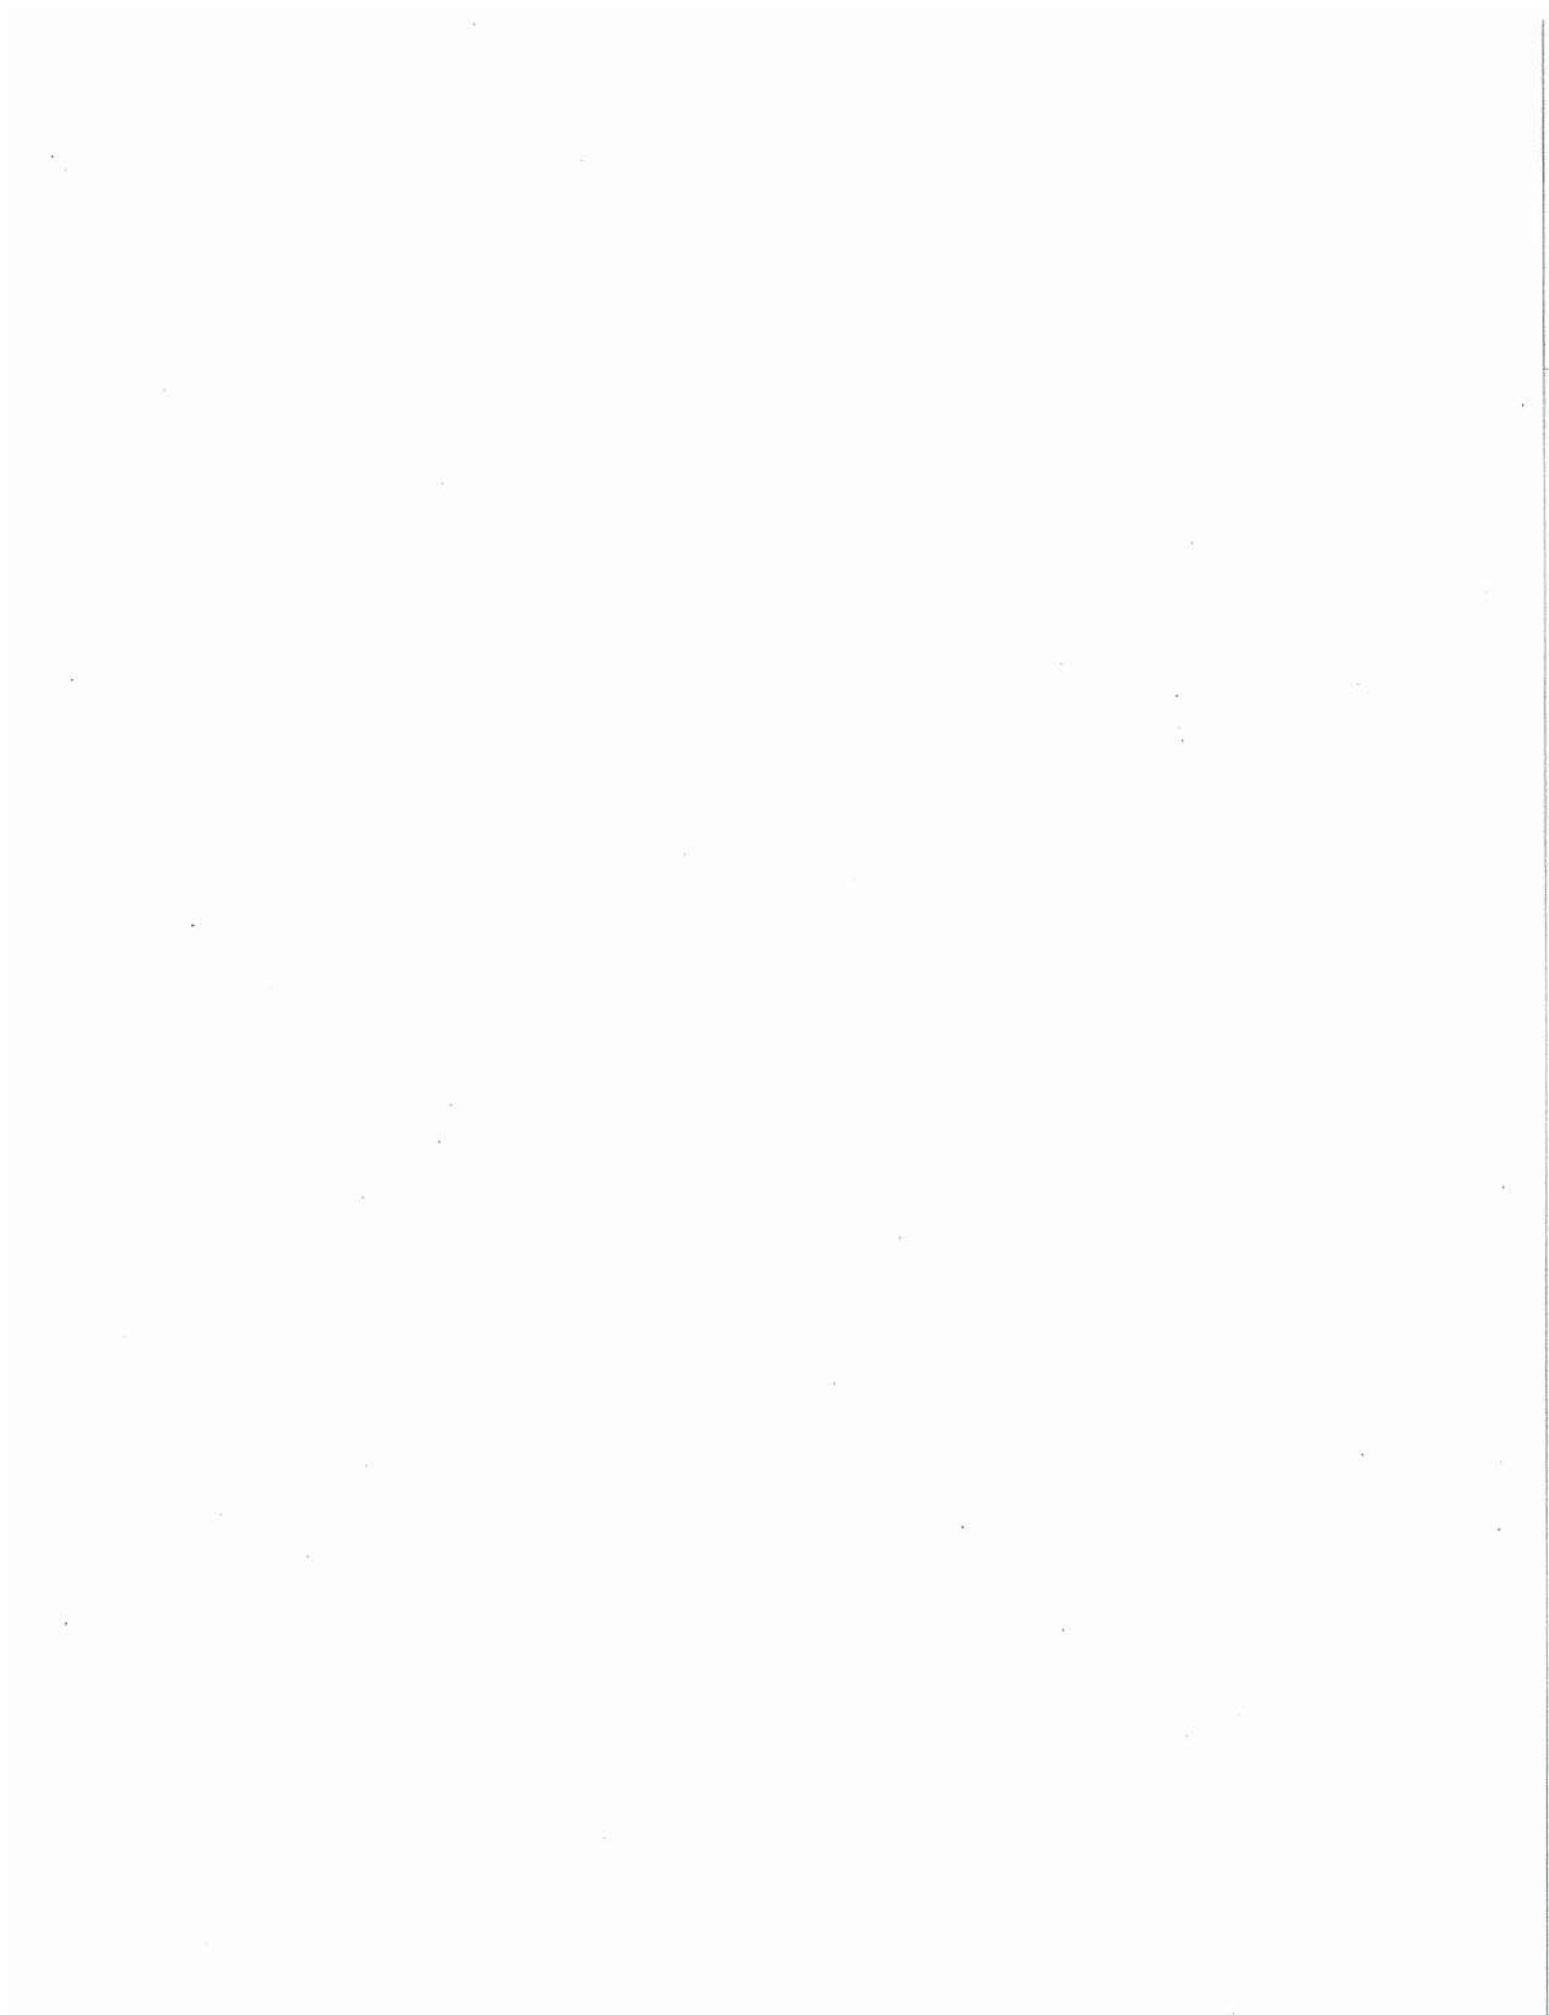

PART 1 GENERAL**1.1 RELATED SECTIONS**

- .1 02 82 00.01 – Asbestos Abatement – Minimum Precautions
- .2 02 82 00.03 – Asbestos Abatement – Maximum Precautions

1.2 REFERENCES

- .1 Canadian General Standards Board (CGSB)
 - .1 CAN/CGSB-1.205-94, Sealer for Application to Asbestos-Fibre-Releasing Materials.
- .2 Canadian Standards Association (CSA International)
- .3 Department of Justice Canada
 - .1 Canadian Environmental Protection Act (CEPA), 1999.
- .4 Health Canada/Workplace Hazardous Materials Information System (WHMIS)
 - .1 Material Safety Data Sheets (MSDS).
- .5 Transport Canada (TC)
 - .1 Transportation of Dangerous Goods Act, 1992 (TDGA).
- .6 Underwriters' Laboratories of Canada (ULC)
- .7 U.S. Department of Health and Human Services/Centers for Disease Control and Prevention (CDC)/National Institute for Occupational Safety and Health (NIOSH)
 - .1 NIOSH 94-113-August 1994, NIOSH Manual of Analytical Methods (NMAM), 4th Edition.
- .8 U.S. Department of Labour - Occupational Safety and Health Administration - Toxic and Hazardous Substances
 - .1 29 CFR 1910.1001-2001, Asbestos Regulations.

1.3 DEFINITIONS

- .1 Airlock: system for permitting ingress or egress without permitting air movement between contaminated area and uncontaminated area, typically consisting of two curtained doorways at least 2 m apart.
- .2 Amended Water: water with a non-ionic surfactant wetting agent added to reduce water tension to allow wetting of fibres.
- .3 Asbestos Containing Materials (ACMs): materials that contain 0.5 per cent or more asbestos by dry weight and are identified under Existing Conditions including fallen materials and settled dust.
- .4 Asbestos Work Areas: area where work takes place which will, or may disturb ACMs.
- .5 Authorized Visitors: Departmental Representatives, Engineers, Consultants or designated representatives, and representatives of regulatory agencies.
- .6 Competent worker: in relation to specific work, means a worker who:
 - .1 Is qualified because of knowledge, training and experience to perform the work.
 - .2 Is familiar with the provincial and federal laws and with the provisions of the regulations that apply to the work.
 - .3 Has knowledge of all potential or actual danger to health or safety in the work.

- .7 Curtained doorway: arrangement of closures to allow ingress and egress from one room to another while permitting minimal air movement between rooms, typically constructed as follows:
 - .1 Place two overlapping sheets of polyethylene over existing or temporarily framed doorway, secure each along top of doorway, secure vertical edge of one sheet along one vertical side of doorway, and secure vertical edge of other sheet along opposite vertical side of doorway.
 - .2 Reinforce free edges of polyethylene with duct tape and weight bottom edge to ensure proper closing.
 - .3 Overlap each polyethylene sheet at openings not less than 1.5 m on each side.
- .8 DOP Test: testing method used to determine integrity of Negative Pressure unit using dioctyl phthalate (DOP) HEPA-filter leak test.
- .9 Friable Materials: material that when dry can be crumbled, pulverized or powdered by hand pressure and includes such material that is crumbled, pulverized or powdered.
- .10 Glove Bag: prefabricated glove bag as follows:
 - .1 Minimum thickness 0.25 mm (10 mil) polyvinyl-chloride bag.
 - .2 Integral 0.25 mm (10 mil) thick polyvinyl-chloride gloves and elastic ports.
 - .3 Equipped with reversible double pull double throw zipper on top and at approximately mid-section of the bag.
 - .4 Straps for sealing ends around pipe.
- .11 HEPA vacuum: High Efficiency Particulate Air filtered vacuum equipment with a filter system capable of collecting and retaining fibres greater than 0.3 microns in any direction at 99.97% efficiency.
- .12 Negative pressure: system that extracts air directly from work area, filters such extracted air through High Efficiency Particulate Air filtering system, and discharges this air directly outside work area to exterior of building.
 - .1 System to maintain minimum pressure differential of 5 Pa relative to adjacent areas outside of work areas, be equipped with alarm to warn of system breakdown, and be equipped with instrument to continuously monitor and automatically record pressure differences.
- .13 Non-Friable Materials: material that when dry cannot be crumbled, pulverized or powdered by hand pressure.
- .14 Occupied Areas: any area of building or work site that is outside Asbestos Work Area.
- .15 Polyethylene sheeting sealed with tape: polyethylene sheeting of type and thickness specified sealed with tape along edges, around penetrating objects, over cuts and tears, and elsewhere as required to provide continuous polyethylene membrane to protect underlying surfaces from water damage or damage by sealants, and to prevent escape of asbestos fibres through sheeting into clean area.
- .16 Sprayer: garden reservoir type sprayer or airless spray equipment capable of producing mist or fine spray. Must be appropriate capacity for scope of work.

1.4 SUBMITTALS

- .1 Submittals in accordance with Section 01 33 00 - Submittal Procedures.
- .2 Before beginning work:
 - .1 Obtain from appropriate agency and submit to Departmental Representative, Engineer or Consultant necessary permits for transportation and disposal of asbestos waste. Ensure that dump operator is fully aware of hazardous nature of material being dumped, and proper methods of disposal. Submit proof satisfactory to Departmental Representative, Engineer or Consultant that suitable arrangements have been made to receive and properly dispose of asbestos waste.
 - .2 Submit proof satisfactory to Departmental Representative, Engineer or Consultant that all asbestos workers have received appropriate training and education by a competent person on hazards of asbestos exposure, good personal hygiene, entry and exit from Asbestos Work Area, aspects of work procedures and protective measures while working in Asbestos Work

- Areas, and the use, cleaning and disposal of respirators and protective clothing. Submit proof of attendance in form of certificate.
- .3 Ensure supervisory personnel have attended asbestos abatement course, of not less than two days duration, approved by Departmental Representative, Engineer or Consultant. Submit proof of attendance in form of certificate. Minimum of one Supervisor for every ten workers.
 - .4 Submit layout of proposed enclosures and decontamination facilities to Departmental Representative, Engineer or Consultant for review.
 - .5 Submit Provincial/Territorial and/or local requirements for Notice of Project form.
 - .6 Submit proof of Contractor's Asbestos Liability Insurance.
 - .7 Submit proof satisfactory to Departmental Representative, Engineer or Consultant that employees have respirator fitting and testing. Workers must be fit tested (irritant smoke test) with respirator that is personally issued.
 - .8 Submit Worker's Compensation Board status and transcription of insurance.
 - .9 Submit documentation including test results, fire and flammability data, and Material Safety Data Sheets (MSDS) for chemicals or materials including but not limited to following:
 - .1 Encapsulants.
 - .2 Amended water.

1.5

QUALITY ASSURANCE

- .1 Regulatory Requirements: comply with Federal, Provincial/Territorial and local requirements pertaining to asbestos, provided that in case of conflict among those requirements or with these specifications more stringent requirement applies. Comply with regulations in effect at time work is performed.
- .2 Health and Safety:
 - .1 Do construction occupational health and safety in accordance with Section 01 35 30 - Health and Safety Requirements.
 - .2 Safety Requirements: worker and visitor protection.
 - .1 Protective equipment and clothing to be worn by workers while in Asbestos Work Area includes:
 - .1 Air purifying full face-mask respirator, Powered air purifying respirator (PAPR) or Supplied air respirator with N-100, R-100 or P-100 particulate filter, personally issued to worker and marked as to efficiency and purpose, suitable for protection against asbestos and acceptable to Provincial Authority having jurisdiction. The respirator to be fitted so that there is an effective seal between the respirator and the worker's face, unless the respirator is equipped with a hood or helmet. The respirator to be cleaned, disinfected and inspected after use on each shift, or more often if necessary, when issued for the exclusive use of one worker, or after each use when used by more than one worker. The respirator to have damaged or deteriorated parts replaced prior to being used by a worker; and, when not in use, to be stored in a convenient, clean and sanitary location. The employer to establish written procedures regarding the selection, use and care of respirators, and a copy of the procedures to be provided to and reviewed with each worker who is required to wear a respirator. A worker not to be assigned to an operation requiring the use of a respirator unless he or she is physically able to perform the operation while using the respirator.
 - .2 Disposable type protective clothing that does not readily retain or permit penetration of asbestos fibres. Protective clothing to be provided by the employer and worn by every worker who enters the work area, and the protective clothing to consist of a head covering and full body covering that fits snugly at the ankles, wrists and neck, in order to prevent asbestos fibres from reaching the garments and skin under the protective clothing. It includes suitable footwear, and it to be repaired or replaced if torn. Requirements for each worker:
 - .1 Remove street clothes in clean change room and put on respirator with new filters or reusable filters that have been tested as satisfactory, clean coveralls and head covers before

- entering Equipment and Access Rooms or Asbestos Work Area. Store street clothes, uncontaminated footwear, towels, and similar uncontaminated articles in clean change room.
- .2 Remove gross contamination from clothing before leaving work area then proceed to Equipment and Access Room and remove clothing except respirators. Place contaminated work suits in receptacles for disposal with other asbestos - contaminated materials. Leave reusable items except respirator in Equipment and Access Room. Still wearing the respirator, proceed naked to showers. Using soap and water wash body and hair thoroughly. Clean outside of respirator with soap and water while showering; remove respirator; remove filters and wet them and dispose of filters in container provided for purpose; and wash and rinse inside of respirator. When not in use in work area, store work footwear in Equipment and Access Room. Upon completion of asbestos abatement, dispose of footwear as contaminated waste or clean thoroughly inside and out using soap and water before removing from work area or from Equipment and Access Room.
 - .3 After showering and drying off, proceed to clean change room and dress in street clothes at end of each day's work, or in clean coveralls before eating, smoking, or drinking. If re-entering work area, follow procedures outlined in paragraphs above.
 - .4 Enter unloading room from outside dressed in clean coveralls to remove waste containers and equipment from Holding Room of Container and Equipment Decontamination Enclosure system. Workers must not use this system as means to leave or enter work area.
- .2 Eating, drinking, chewing, and smoking are not permitted in Asbestos Work Area.
 - .3 Ensure workers are fully protected with respirators and protective clothing during preparation of system of enclosures prior to commencing actual asbestos abatement.
 - .4 Provide and post in Clean Change Room and in Equipment and Access Room the procedures described in this Section, in both official languages.
 - .5 Ensure that no person required to enter an Asbestos Work Area has facial hair that affects seal between respirator and face.
 - .6 Visitor Protection:
 - .1 Provide protective clothing and approved respirators to Authorized Visitors to work areas.
 - .2 Instruct Authorized Visitors in the use of protective clothing, respirators and procedures.
 - .3 Instruct Authorized Visitors in proper procedures to be followed in entering into and exiting from Asbestos Work Area.
- 1.6 WASTE MANAGEMENT AND DISPOSAL**
- .1 Refer to Section 01 00 10 – General Instructions.
- 1.7 EXISTING CONDITIONS**
- .1 Results of tests of asbestos containing materials to be handled, removed, or otherwise disturbed and disposed of during this Project are bound into this specification. These are for general information only and are not necessarily representative of asbestos containing materials covered within scope of this Project.
 - .2 Notify Departmental Representative, Engineer or Consultant of suspect asbestos containing material discovered during Work and not apparent from drawings, specifications, or report pertaining to Work. Do not disturb such material until instructed by Departmental Representative, Engineer or Consultant.

1.8 SCHEDULING

- .1 Not later than ten (10) days before beginning Work on this Project notify following in writing:
 - .1 Appropriate Regional or Zone Director of Medical Services Branch, Health Canada.
 - .2 Regional Office of Labour Canada.
 - .3 Provincial/Territorial, Department of Labour.
 - .4 Disposal Authority.
- .2 Inform sub-trades of presence of asbestos containing materials identified in Existing Conditions.
- .3 Submit to Departmental Representative, Engineer or Consultant copy of notifications prior to start of Work.
- .4 Refer to Section 01 00 10 – General Instructions.

1.9 OWNER'S INSTRUCTIONS

- .1 Before beginning Work, provide to Departmental Representative, Engineer or Consultant satisfactory proof that every worker has had instruction and training in hazards of asbestos exposure, in personal hygiene including dress and showers, in entry and exit from Asbestos Work Area, in aspects of work procedures including glove bag procedures, and in use, cleaning, and disposal of respirators and protective clothing.
- .2 Instruction and training related to respirators includes, at minimum:
 - .1 Proper fitting of equipment.
 - .2 Inspection and maintenance of equipment.
 - .3 Disinfecting of equipment.
 - .4 Limitations of equipment.
- .3 Instruction and training must be provided by competent, qualified person.
- .4 Supervisory personnel to complete required training.

PART 2 PRODUCTS**2.1 MATERIALS**

- .1 Polyethylene: minimum 0.15 mm thick unless otherwise specified; in sheet size to minimize joints.
- .2 FR polyethylene: minimum 0.15 mm thick, woven fibre reinforced fabric bonded both sides with polyethylene.
- .3 Tape: fibreglass - reinforced duct tape suitable for sealing polyethylene under both dry conditions and wet conditions using amended water.
- .4 Wetting agent: 50% polyoxyethylene ester and 50% polyoxyethylene ether, or other material approved by Departmental Representative, Engineer or Consultant, mixed with water in concentration to provide adequate penetration and wetting of asbestos containing material.
- .5 Waste Containers: contain waste in two separate containers.
 - .1 Inner container: 0.15 mm thick sealable polyethylene bag or where glove bag method is used, glove bag itself.
 - .2 Outer container: sealable metal or fibre type where there are sharp objects included in waste material; otherwise outer container may be sealable metal or fibre type or second 0.15 mm thick sealable polyethylene bag.

- .3 Labelling requirements: affix preprinted cautionary asbestos warning, in both official languages, that is visible when ready for removal to disposal site. Label containers in accordance with Asbestos Regulations 29 CFR 1910.1001. Label in both official languages.
- .6 Glove bag:
 - .1 Acceptable materials: safe-T-Strip products in configuration suitable for Work, or Alternative material approved by addendum during tendering period in accordance with Instructions to Tenderers.
 - .2 The glove bag to be equipped with:
 - .1 Sleeves and gloves that are permanently sealed to the body of the bag to allow the worker to access and deal with the insulation and maintain a sealed enclosure throughout the work period.
 - .2 Valves or openings to allow insertion of a vacuum hose and the nozzle of a water sprayer while maintaining the seal to the pipe, duct or similar structure.
 - .3 A tool pouch with a drain.
 - .4 A seamless bottom and a means of sealing off the lower portion of the bag.
 - .5 A high strength double throw zipper and removable straps, if the bag is to be moved during the removal operation.
- .7 Tape: tape suitable for sealing polyethylene to surfaces under both dry and wet conditions using amended water.
- .8 Slow - drying sealer: non-staining, clear, water - dispersible type that remains tacky on surface for at least 8 hours and designed for purpose of trapping residual asbestos fibres.

PART 3 EXECUTION

3.1 PREPARATION

- .1 Do construction occupational health and safety in accordance with Section 01 35 30 - Health and Safety Requirements.
- .2 Work Areas:
 - .1 Shut off and isolate air handling and ventilation systems to prevent fibre dispersal to other building areas during work phase. Conduct smoke tests to ensure that duct work is airtight. Seal and caulk joints and seams of active return air ducts within Asbestos Work Area.
 - .2 Preclean moveable furniture and carpeting within proposed work areas using HEPA vacuum and remove from work areas to temporary location.
 - .3 Preclean fixed casework, plant, and equipment within proposed work areas, using HEPA vacuum and cover with polyethylene sheeting sealed with tape.
 - .4 Clean proposed work areas using, where practicable, HEPA vacuum cleaning equipment. If not practicable, use wet cleaning method. Do not use methods that raise dust, such as dry sweeping, or vacuuming using other than HEPA vacuum equipment.
 - .5 The spread of dust from the work area to be prevented by:
 - .1 Using enclosures of polyethylene or other suitable material that is impervious to asbestos (including, if the enclosure material is opaque, one or more transparent window areas to allow observation of the entire work area from outside the enclosure), if the work area is not enclosed by walls.
 - .2 Using curtains of polyethylene sheeting or other suitable material that is impervious to asbestos, fitted on each side of each entrance or exit from the work area.
 - .6 Put negative pressure system in operation and operate continuously from time first polyethylene is installed to seal openings until final completion of work including final cleanup. Provide continuous monitoring of pressure difference using automatic recording instrument. The system to maintain a negative air pressure of 0.02 inches (5 Pa) of water, relative to the area outside the enclosed area. The system to be inspected and maintained by a competent

person prior each use to ensure that there is no air leakage, and if the filter is found to be damaged or defective, it to be replaced before the ventilation system is used.

- .7 Seal off openings such as corridors, doorways, windows, skylights, ducts, grilles, and diffusers, with polyethylene sheeting sealed with tape.
 - .8 Cover floor and wall surfaces with polyethylene sheeting sealed with tape. Use FR polyethylene on floors. Cover floors first so that polyethylene extends at least 300 mm up walls then cover walls to overlap floor sheeting.
 - .9 Build airlocks at entrances to and exits from work areas so that work areas are always closed off by one curtained doorway when workers enter or exit.
 - .10 At each access to work areas install warning signs in both official languages in upper case "Helvetica Medium" letters reading as follows where number in parentheses indicates font size to be used: "CAUTION ASBESTOS HAZARD AREA (25 mm) NO UNAUTHORIZED ENTRY (19 mm) WEAR ASSIGNED PROTECTIVE EQUIPMENT (19 mm) BREATHING ASBESTOS DUST MAY CAUSE SERIOUS BODILY HARM (7 mm)".
 - .11 After work area isolation, remove heating, ventilating, and air conditioning filters, pack in sealed plastic bags 0.15 mm minimum thick and treat as contaminated asbestos waste. Remove ceiling - mounted objects such as lights, partitions, other fixtures not previously sealed off, and other objects that interfere with asbestos removal, as directed by Departmental Representative, Engineer or Consultant. Use localized water spraying during fixture removal to reduce fibre dispersal.
 - .12 Maintain emergency and fire exits from work areas, or establish alternative exits satisfactory to Authority having jurisdiction.
 - .13 Where application of water is required for wetting asbestos containing materials, shut off electrical power, provide 24 volt safety lighting and ground fault interrupter circuits on power source for electrical tools, in accordance with applicable CSA Standard. Ensure safe installation of electrical lines and equipment.
 - .14 After preparation of work areas and Decontamination Enclosure Systems, remove designated asbestos containing ceiling tiles within work areas progressively and carefully, clean using HEPA vacuum and damp sponge, wrap clean panels in 0.10 mm minimum thick polyethylene, and store in building as directed by Departmental Representative, Engineer or Consultant and dispose of as contaminated waste. Clean "T" grid suspension system within work areas using wet sponge, disconnect grid from hangers, wrap grid members in 0.10 mm minimum thick polyethylene and store in building as directed by Departmental Representative, Engineer or Consultant.
 - .15 After preparation of work areas and Decontamination Enclosure Systems, remove plaster ceilings, including lath, furring, channels, hangers, wires, clips, and dispose of as contaminated waste in specified containers. Spray asbestos debris and immediate work area with amended water to reduce dust, as work progresses.
 - .16 After preparation of work areas and Decontamination Enclosure Systems, for the removal of all other asbestos containing materials, remove within work area and dispose of as contaminated waste in specified containers. Spray asbestos debris and immediate work area with amended water to reduce dust, as work progresses.
- .3 Worker Decontamination Enclosure System:
- .1 Worker Decontamination Enclosure System includes Equipment and Access Room, Shower Room, and Clean Room, as follows:
 - .1 Equipment and Access Room: build Equipment and Access Room between Shower Room and work areas, with two curtained doorways, one to Shower Room and one to work areas. Install portable toilet, waste receptor, and storage facilities for workers' shoes and protective clothing to be reworn in work areas. Build Equipment and Access Room large enough to accommodate specified facilities, other equipment needed, and at least one worker allowing him /her sufficient space to undress comfortably.
 - .2 Shower Room: build Shower Room between Clean Room and Equipment and Access Room, with two curtained doorways, one to Clean Room and one to Equipment and Access Room. Provide one shower for every five workers. Provide constant supply of hot and cold or warm water. Cold water source is available as shown at job show. Hot water source is available as shown at job show. Drains to common sewers are available as shown at job show. Provide piping and connect to water sources and drains. Pump waste water through 5 micrometre filter system acceptable to Departmental Representative, Engineer or Consultant before directing into drains. Provide soap, clean towels, and appropriate containers for disposal of used respirator filters.

- .3 Clean Room: build Clean Room between Shower Room and clean areas outside of enclosures, with two curtained doorways, one to outside of enclosures and one to Shower Room. Provide lockers or hangers and hooks for workers' street clothes and personal belongings. Provide storage for clean protective clothing and respiratory equipment. Install mirror to permit workers to fit respiratory equipment properly.
- .4 Container and Equipment Decontamination Enclosure System:
 - .1 Container and Equipment Decontamination Enclosure System consists of Staging Area within work area, Washroom, Holding Room, and Unloading Room. Purpose of system is to provide means to decontaminate waste containers, scaffolding, waste and material containers, vacuum and spray equipment, and other tools and equipment for which Worker Decontamination Enclosure System is not suitable.
 - .1 Staging Area: designate Staging Area in work area for gross removal of dust and debris from waste containers and equipment, labelling and sealing of waste containers, and temporary storage pending removal to Washroom. Equip Staging Area with curtained doorway to Washroom.
 - .2 Washroom: build Washroom between Staging Area and Holding Room with two curtained doorways, one to Staging Area and one to Holding Room. Provide high - pressure low - volume sprays for washing of waste containers and equipment. Pump waste water through 5 micrometre filter system before directing into drains. Provide piping and connect to water sources and drains.
 - .3 Holding Room: build Holding Room between Washroom and Unloading Room, with two curtained doorways, one to Washroom and one to Unloading Room. Build Holding Room sized to accommodate at least two waste containers and largest item of equipment used.
 - .4 Unloading Room: build Unloading Room between Holding Room and outside, with two curtained doorways, one to Holding Room and one to outside.
- .5 Construction of Decontamination Enclosures:
 - .1 Build suitable framing for enclosures or use existing rooms where convenient, and line with polyethylene sheeting sealed with tape. Use FR polyethylene on floors.
 - .2 Build curtained doorways between enclosures so that when people move through or when waste containers and equipment are moved through doorway, one of two closures comprising doorway always remains closed.
- .6 Separation of Work Areas from Occupied Areas:
 - .1 Separate parts of building required to remain in use from parts of building used for asbestos abatement by means of airtight barrier system constructed as follows:
 - .1 Build suitable floor to ceiling lumber or metal stud framing, cover with polyethylene sheeting sealed with tape, and apply 9 mm minimum thick plywood. Seal joints between plywood sheets and between plywood and adjacent materials with surface film forming type sealer, to create airtight barrier.
 - .2 Cover plywood barrier with polyethylene sealed with tape, as specified for work areas.
- .7 Maintenance of Enclosures:
 - .1 Maintain enclosures in tidy condition.
 - .2 Ensure that barriers and polyethylene linings are effectively sealed and taped. Repair damaged barriers and remedy defects immediately upon discovery.
 - .3 Visually inspect enclosures at beginning of each working period.
 - .4 Use smoke methods to test effectiveness of barriers when directed by Departmental Representative, Engineer or Consultant.
- .8 Do not begin Asbestos Abatement work until:
 - .1 Arrangements have been made for disposal of waste.
 - .2 For wet stripping techniques, arrangements have been made for containing, filtering, and disposal of waste water.
 - .3 Work areas and decontamination enclosures and parts of building required to remain in use are effectively segregated.
 - .4 Tools, equipment, and materials waste containers are on hand.

- .5 Arrangements have been made for building security.
- .6 Warning signs are displayed where access to contaminated areas is possible.
- .7 Notifications have been completed and other preparatory steps have been taken.

3.2 SUPERVISION

- .1 Minimum of one Supervisor for every ten workers is required.
- .2 Approved Supervisor must remain within Asbestos Work Area during disturbance, removal, or other handling of asbestos containing materials.

3.3 ASBESTOS REMOVAL

- .1 Before removing asbestos:
 - .1 Prepare site.
 - .2 Spray asbestos material with water containing specified wetting agent, using airless spray equipment capable of providing "mist" application to prevent release of fibres. Saturate asbestos material sufficiently to wet it to substrate without causing excess dripping. Spray asbestos material repeatedly during work process to maintain saturation and to minimize asbestos fibre dispersion.
- .2 Remove saturated asbestos material in small sections. Do not allow saturated asbestos to dry out. As it is being removed pack material in sealable plastic bags 0.15 mm minimum thick and place in labelled containers for transport.
- .3 Seal filled containers. Clean external surfaces thoroughly by wet sponging. Remove from immediate working area to Staging Area. Clean external surfaces thoroughly again by wet sponging before moving containers to decontamination Washroom. Wash containers thoroughly in decontamination Washroom, and store in Holding Room pending removal to Unloading Room and outside. Ensure that containers are removed from Holding Room by workers who have entered from uncontaminated areas dressed in clean coveralls.
- .4 After completion of stripping work, wire brushed and wet sponged surfaces from which asbestos has been removed to remove visible material. During this work keep surfaces wet.
- .5 Where Departmental Representative, Engineer or Consultant decides complete removal of asbestos containing material is impossible due to obstructions such as structural members or major service elements, and provided written direction, encapsulate material as follows:
 - .1 Apply surface film forming type sealer to provide 0.635 mm minimum dry film thickness over sprayed asbestos surfaces. Apply using airless spray equipment to avoid blowing off fibres. Apply penetrating type sealer to penetrate existing sprayed asbestos surfaces to uniform depth of 25 mm minimum. Apply penetrating type sealer to penetrate existing sprayed asbestos surfaces uniformly to substrate.
- .6 After wire brushing and wet sponging to remove visible asbestos, and after encapsulating asbestos containing material impossible to remove, wet clean entire work area including Equipment and Access Room, and equipment used in process. After 24 hour period to allow for dust settling, wet clean these areas and objects again. During this settling period no entry, activity, or ventilation will be permitted. After second 24 hour period under same conditions, clean these areas and objects again using HEPA vacuum followed by wet cleaning. After inspection by Consultant, apply continuous coat of slow drying sealer to surfaces of work area. Allow at least 16 hours with no entry, activity, ventilation, or disturbance other than operation of negative pressure units during this period.
- .7 Work is subject to visual inspection and air monitoring. Contamination of surrounding areas indicated by visual inspection or air monitoring will require complete enclosure and clean-up of affected areas.
- .8 Cleanup:
 - .1 Frequently during Work and immediately after completion of work, clean up dust and asbestos containing waste using HEPA vacuum or by damp mopping.

- .2 Place dust and asbestos containing waste in sealed dust tight waste bags. Treat drop sheets and disposable protective clothing as asbestos waste and wet and fold to contain dust and then place in waste bags.
- .3 Immediately before their removal from Asbestos Work Area and disposal, clean each filled waste bag using damp cloths or HEPA vacuum and place in second clean waste bag.
- .4 Seal and remove double bagged waste from site. Dispose of in accordance with requirements of Provincial/Territorial and Federal authority having jurisdiction. Supervise dumping and ensure that dump operator is fully aware of hazardous nature of material to be dumped and that guidelines and regulations for asbestos disposal are followed.
- .5 Perform final thorough clean-up of Asbestos Work Areas and adjacent areas affected by Work using HEPA vacuum.

3.4 FINAL CLEANUP

- .1 Following cleaning specified above, and when air sampling shows that asbestos levels on both sides of seals do not exceed 0.01 fibres/cc as determined by membrane filter method at 400-500X magnification phase contrast illumination, as described in NIOSH Method 94-113 or equivalent, proceed with final cleanup.
- .2 Remove polyethylene sheet by rolling it away from walls to centre of work area. Vacuum visible asbestos containing particles observed during cleanup, immediately, using HEPA vacuum equipment.
- .3 Place polyethylene seals, tape, cleaning material, clothing, and other contaminated waste in plastic bags and sealed labelled waste containers for transport.
- .4 Include in clean-up Work areas, Equipment and Access Room, Washroom, Shower Room, and other contaminated enclosures.
- .5 Include in clean-up sealed waste containers and equipment used in Work and remove from work areas, via Container and Equipment Decontamination Enclosure System, at appropriate time in cleaning sequence.
- .6 Conduct final check to ensure that no dust or debris remains on surfaces as result of dismantling operations and carry out air monitoring again to ensure that asbestos levels in building do not exceed 0.01 fibres/cc. Repeat cleaning using HEPA vacuum equipment, or wet cleaning methods where feasible, in conjunction with sampling until levels meet this criteria.
- .7 As work progresses, and to prevent exceeding available storage capacity on site, remove sealed and labelled containers containing asbestos waste and dispose of to authorized disposal area in accordance with requirements of disposal authority. Ensure that each shipment of containers transported to dump is accompanied by Contractor's representative to ensure that dumping is done in accordance with governing regulations.

3.5 RE-ESTABLISHMENT OF OBJECTS AND SYSTEMS

- .1 When cleanup is complete:
 - .1 Re-establish objects and furniture moved to temporary locations in course of Work, in their proper positions.
 - .2 Re-secure mounted objects removed in course of Work in their former positions.
 - .3 Re-establish mechanical and electrical systems in proper working order. Install new filters.
 - .4 Repair or replace objects damaged in the course of Work, as directed by Departmental Representative, Engineer or Consultant.

3.6 AIR MONITORING


- .1 From beginning of Work until completion of cleaning operations, Consultant to take air samples on daily basis outside of work area enclosure in accordance with Health Canada recommendations.

- .1 Contractor will be responsible for monitoring inside enclosure in accordance with applicable Provincial/Territorial Occupational Health and Safety Regulations.
- .2 Use results of air monitoring inside work area to establish type of respirators to be used. Workers may be required to wear sample pumps for up to full-shift periods.
 - .1 If fibre levels are above safety factor of respirators in use, stop abatement, apply means of dust suppression, and use higher safety factor in respiratory protection for persons inside enclosure.
 - .2 If air monitoring shows that areas outside work area enclosures are contaminated, enclose, maintain and clean these areas, in same manner as that applicable to work areas.
- .3 During course of Work, Consultant to measure fibre content of air outside work areas by means air samples analyzed by Phase Contrast Microscopy (PCM).
 - .1 Stop Work when PCM measurements exceed 0.05 f/cc and correct procedures.
- .4 Final air monitoring to be conducted as follows: After Asbestos Work Area has passed visual inspection and acceptable coat of lock-down agent has been applied to surfaces within enclosure, and appropriate setting period has passed, Consultant will perform air monitoring within Asbestos Work Area by aggressive methods, where provincial regulations require.
 - .1 Final air monitoring results must show fibre levels of less than 0.01 f/cc.
 - .2 If air monitoring results show fibre levels in excess of 0.01 f/cc, re-clean work area and apply another acceptable coat of lock-down agent to surfaces.
 - .3 Repeat as necessary until fibre levels are less than 0.01 f/cc.

3.7 INSPECTION

- .1 Perform inspection of Asbestos Work Area to confirm compliance with specification and governing authority requirements. Deviations from these requirements that have not been approved in writing by Departmental Representative may result in Work stoppage, at no cost to Owner.
- .2 Consultant will inspect Work for:
 - .1 Adherence to specific procedures and materials.
 - .2 Final cleanliness and completion.
 - .3 No additional costs will be allowed by Contractor for additional labour or materials required to provide specified performance level.
- .3 When asbestos leakage from Asbestos Work Area has occurred or is likely to occur Departmental Representative, Engineer or Consultant may order Work shutdown.
 - .1 No additional costs will be allowed by Contractor for additional labour or materials required to provide specified performance level.

END OF SECTION

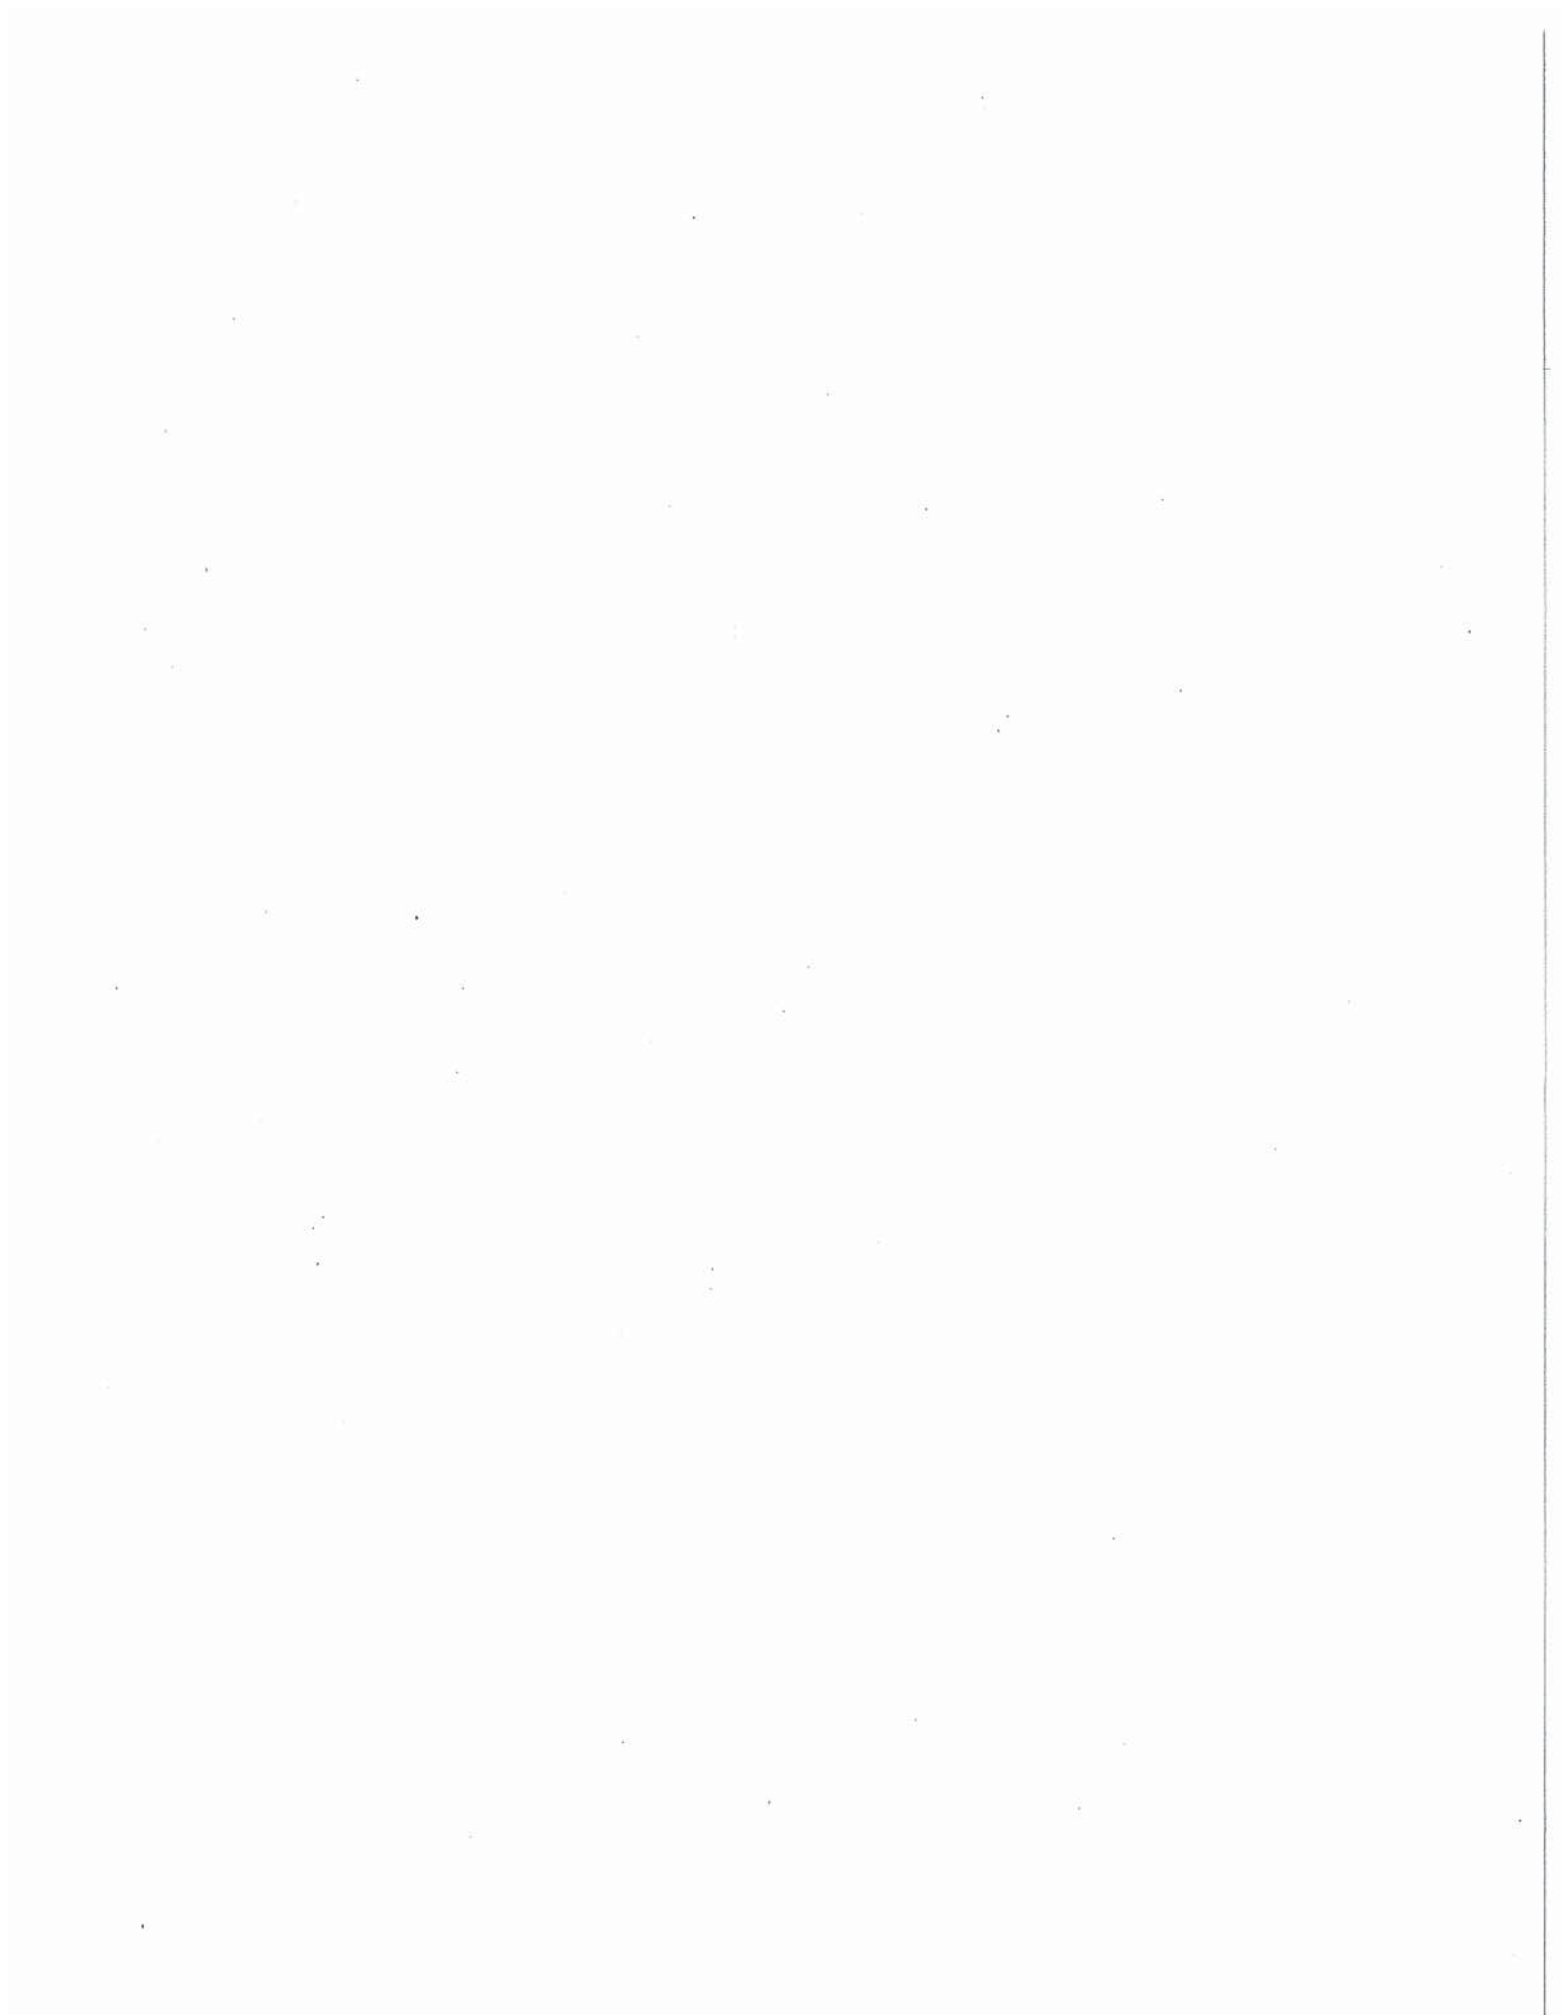

Part 1 General**1.1 REFERENCES**

- .1 Health Canada/Workplace Hazardous Materials Information System (WHMIS)
 - .1 Material Safety Data Sheets (MSDS).
- .2 Underwriter's Laboratories of Canada (ULC)
 - .1 CAN-ULC-S101-04, Standard Methods of fire Endurance Tests of Building Construction and Materials.
 - .2 CAN-ULC-S102-03, Method of Test for Surface Burning Characteristics of Building Materials and Assemblies.

1.2 ACTION AND INFORMATIONAL SUBMITTALS

- .1 Provide submittals in accordance with Section 01 33 00 - Submittal Procedures.
- .2 Product Data:
 - .1 Submit manufacturer's printed product literature, specifications and datasheet and include product characteristics, performance criteria, physical size, finish and limitations.
 - .2 Submit two copies of WHMIS MSDS - Material Safety Data Sheets in accordance with Section 02 81 01 - Hazardous Materials.
- .3 Samples: submit duplicate 300 x 300 mm size sample of exposed fireproofing for approval of texture and colour.
- .4 Quality assurance submittals: submit following in accordance with Section 01 45 00 - Quality Control.
 - .1 Test Reports:
 - .1 Submit product data including certified copies of test reports verifying fireproofing applied to substrate as constructed on project will meet or exceed requirements of Specification.
 - .2 Submit test results in accordance with CAN-ULC-S101 for fire endurance and CAN-ULC-S102 for surface burning characteristics.
 - .3 For assemblies not tested and rated, submit proposals based on related designs using accepted fireproofing design criteria.
 - .2 Certificates: submit certificates signed by manufacturer certifying that materials comply with specified performance characteristics and physical properties.
 - .3 Manufacturer's Instructions: submit manufacturer's installation instructions and special handling criteria, installation sequence, cleaning procedures.
 - .4 Manufacturer's Field Reports: submit to manufacturer's written reports within 3 days of review, verifying compliance of Work, as described in PART 3 - FIELD QUALITY CONTROL.

1.3 QUALITY ASSURANCE

- .1 Qualifications:
 - .1 Installer: company specializing in sprayed-on fireproofing approved by manufacturer.
- .2 Mock-ups:
 - .1 Construct mock-up in accordance with Section 01 45 00 - Quality Control.
 - .2 Apply fireproofing to approximately 10 m² area of surface to be treated.
 - .3 Mock-up will be used:
 - .1 To judge workmanship, substrate preparation, operation of equipment and material application.
 - .2 For testing to determine compliance with performance requirements.

- .4 Locate where directed.
- .5 Allow 24 hours for inspection of mock-up by Departmental Representative before proceeding with fireproofing work.
- .6 When accepted, mock-up will demonstrate minimum standard of quality required for this work. Approved mock-up may remain as part of finished work.
- .3 Site Meetings: as part of Manufacturer's Services described in PART 3 - FIELD QUALITY CONTROL, schedule site visits, to review Work, at stages listed.
 - .1 After delivery and storage of products, and when preparatory Work is complete but before installation begins.
 - .2 Twice during progress of Work at 25% and 60% complete.
 - .3 Upon completion of Work, after cleaning is carried out.

1.4 DELIVERY, STORAGE AND HANDLING

- .1 Packing, shipping, handling and unloading:
 - .1 Deliver, store and handle materials in accordance with Section 01 61 00 - Common Product Requirements.
 - .2 Deliver, store and handle materials in accordance with manufacturer's written instructions.
 - .3 Deliver packaged materials in original unopened containers, marked to indicate brand name, manufacturer, ULC markings.
- .2 Storage and Protection:
 - .1 Store materials indoors.
 - .2 Store and protect materials from exposure to harmful weather conditions and at temperature and humidity conditions recommended by manufacturer.
 - .3 Damaged or opened containers will be rejected.
 - .4 Packaging to indicate shelf-life and materials to be applied prior to expiration of shelf-life.
 - .5 Provide temporary enclosures to prevent spray from contaminating air beyond application area.
 - .6 Protect adjacent surfaces and equipment from damage by overspray, fall-out, and dusting of fireproofing materials.
- .3 Waste Management and Disposal:
 - .1 Separate waste materials for recycling in accordance with Section 01 74 21 - Construction/Demolition Waste Management and Disposal.

1.5 AMBIENT CONDITIONS

- .1 At temperatures less than 5 degrees C, ensure that 5 degrees C air and substrate temperature is maintained during and for 24 hours after application. Ensure that natural ventilation to properly dry the fireproofing during and subsequent to its application is provided. In enclosed areas lacking openings for natural ventilation, ensure that interior air is circulated and exhausted to the outside.
- .2 Maintain relative humidity within limits recommended fireproofing manufacturer.
- .3 Ensure that natural ventilation to properly dry fireproofing during and subsequent to its application is provided.
- .4 In enclosed areas lacking openings for natural ventilation, provide minimum of 4 air exchanges per hour by forced air circulation.

Part 2 Products

2.1 MATERIALS

- .1 Sprayed fireproofing: ULC certified asbestos-free mineral fibre fireproofing qualified for use in ULC Designs specified and fungus resistant for 28 days.

- .2 Curing compound: type recommended by fireproofing manufacturer, qualified for use in ULC Designs specified.
- .3 Sealer: type recommended by fireproofing manufacturer, qualified for use in ULC Design specified.
 - .1 Colour: white.
- .4 Fireproofing: minimum dry density and cohesion/adhesion properties as follows:
 - .1 Fireproofing for structural components concealed above ceiling, or within wall, chase, or furred space: minimum applied dry density of 240 kg per cubic meter and cohesion/adhesion strength of 9.57 kPa.
 - .2 Fireproofing for exposed structural components, except where otherwise specified or indicated: minimum applied dry density of 350 kg per cubic meter and cohesion/adhesion strength of 20.83 kPa.
 - .3 Fireproofing for structural components located in mechanical rooms and storage areas: minimum applied dry density of 640 kg per cubic meter and cohesion/adhesion strength of 350 kPa.
 - .4 Ensure spray-applied fireproofing: does not crack, spall or delaminate under downward deflection conditions over 3 m clear span.
 - .5 Minimum compressive strength: 48 kPa.
 - .6 Spray-Applied fireproofing material: not contribute to corrosion of test panels.
 - .7 Dust removal: not exceed 0.25 gram per square meter.

Part 3 Execution

3.1 MANUFACTURER'S INSTRUCTIONS

- .1 Compliance: comply with manufacturer's written recommendations or specifications, including product technical bulletins, handling, storage and installation instructions, and datasheets.

3.2 PREPARATION

- .1 Substrate: free of material, which would impair bond.
- .2 Verify that painted substrates are compatible and have suitable bonding characteristics to receive fireproofing.
- .3 Remove incompatible materials.
- .4 Ensure that items required to penetrate fireproofing are placed before installation of fireproofing.
- .5 Ensure that ducts, piping, equipment, or other items which would interfere with application of fireproofing are not positioned until fireproofing work is completed.

3.3 APPLICATION

- .1 Apply bonding adhesive or primer to substrate if recommended by manufacturer.
- .2 Apply fireproofing to correspond with tested assemblies, or acceptable calculation procedures to provide fire resistance ratings.
- .3 Apply fireproofing over substrate, building up to required thickness to cover substrate with monolithic blanket of uniform density and texture.
- .4 Apply fireproofing directly to open web joists without use of expanded lath.
- .5 Tamp smooth, surfaces visible in finished work.
- .6 Apply curing compound to surface of cementitious fireproofing as required by manufacturer.
- .7 Apply sealer to surface of mineral fibre fireproofing as required by manufacturer in ventilation plenums and as indicated.

3.4 FIELD QUALITY CONTROL

- .1 Manufacturer's Field Services:
 - .1 Obtain written report from manufacturer verifying compliance of Work, in handling, installing, applying, protecting and cleaning of product and submit Manufacturer's Field Reports as described in PART 1 - SUBMITTALS.
 - .2 Provide manufacturer's field services consisting of product use recommendations and periodic site visits for inspection of product installation in accordance with manufacturer's instructions.
 - .3 Schedule site visits, to review Work, as directed in PART 1 - QUALITY ASSURANCE.
- .2 Inspection and Site Tests:
 - .1 Inspection and testing of fireproofing will be carried out by Testing Laboratory designated by Departmental Representative.

3.5 PATCHING

- .1 Patch damage to fireproofing caused by testing or by other trades before fireproofing is concealed, or if exposed, before final inspection.

3.6 CLEANING

- .1 Proceed in accordance with Section 01 74 11 - Cleaning.
- .2 Clean surfaces not indicated to receive fireproofing of sprayed material within 24 hours period after application.
- .3 On completion and verification of performance of installation, remove surplus materials, excess materials, rubbish, tools and equipment.

END OF SECTION

