


47' MLB Lifting Instructions

- Aft strap must be located just aft of frame 4 but no more than 16 inches aft of frame 4 where shafts exits bearing - do not lift here.
- Fwd strap must be located between bulkhead 8 and frame 9 or between bulkhead 10 and frame 11.
- Engine suction are between frames 4 and 5 - do not lift here
- Aft sounder is between frames 7 and 8 and fwd sounder is between frames 9 and 10 - do not lift in either of these places.

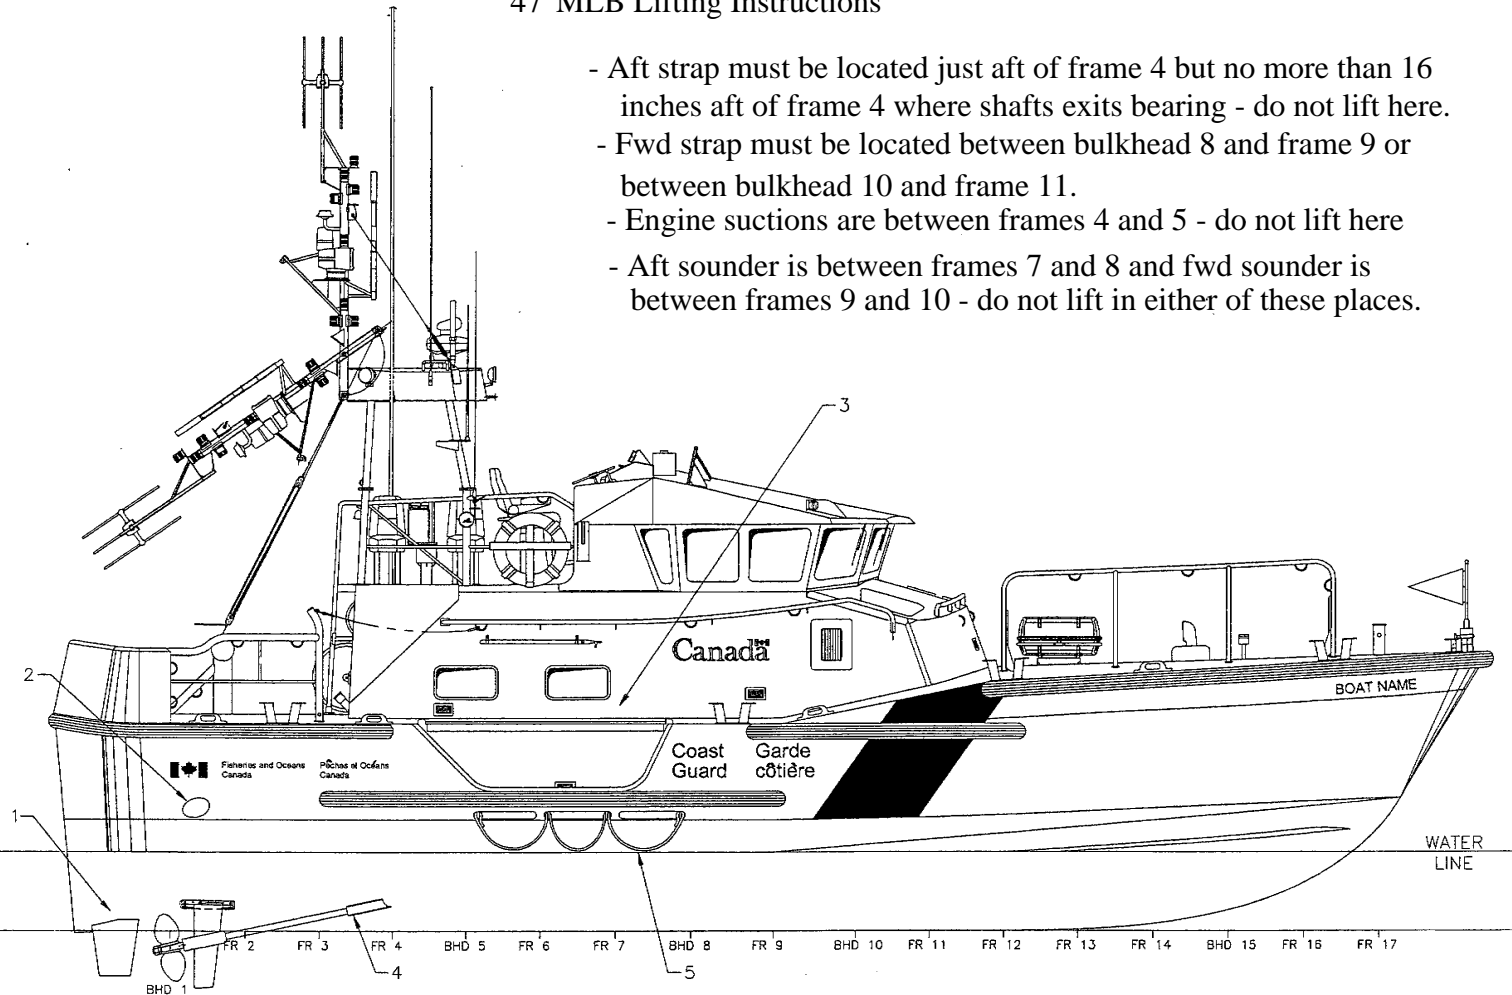

1. RUDDERS EXIT HULL AFT OF FRAME 1
2. EXHAUST PIPE EXIT HULL BETWEEN FRAMES 1 AND 2, ABOVE WATERLINE
3. WALKING FLATS/ RECOVERY RECESSES P/S (BETWEEN FRAMES 5 AND 8)
4. PROPELLER SHAFTS EXIT HULL AT FRAME 4
5. GRAB LINES ATTACHED TO HULL BETWEEN FRAMES 5 AND 8, ABOVE FULL LOAD WATERLINE