



SERVICE CHASE

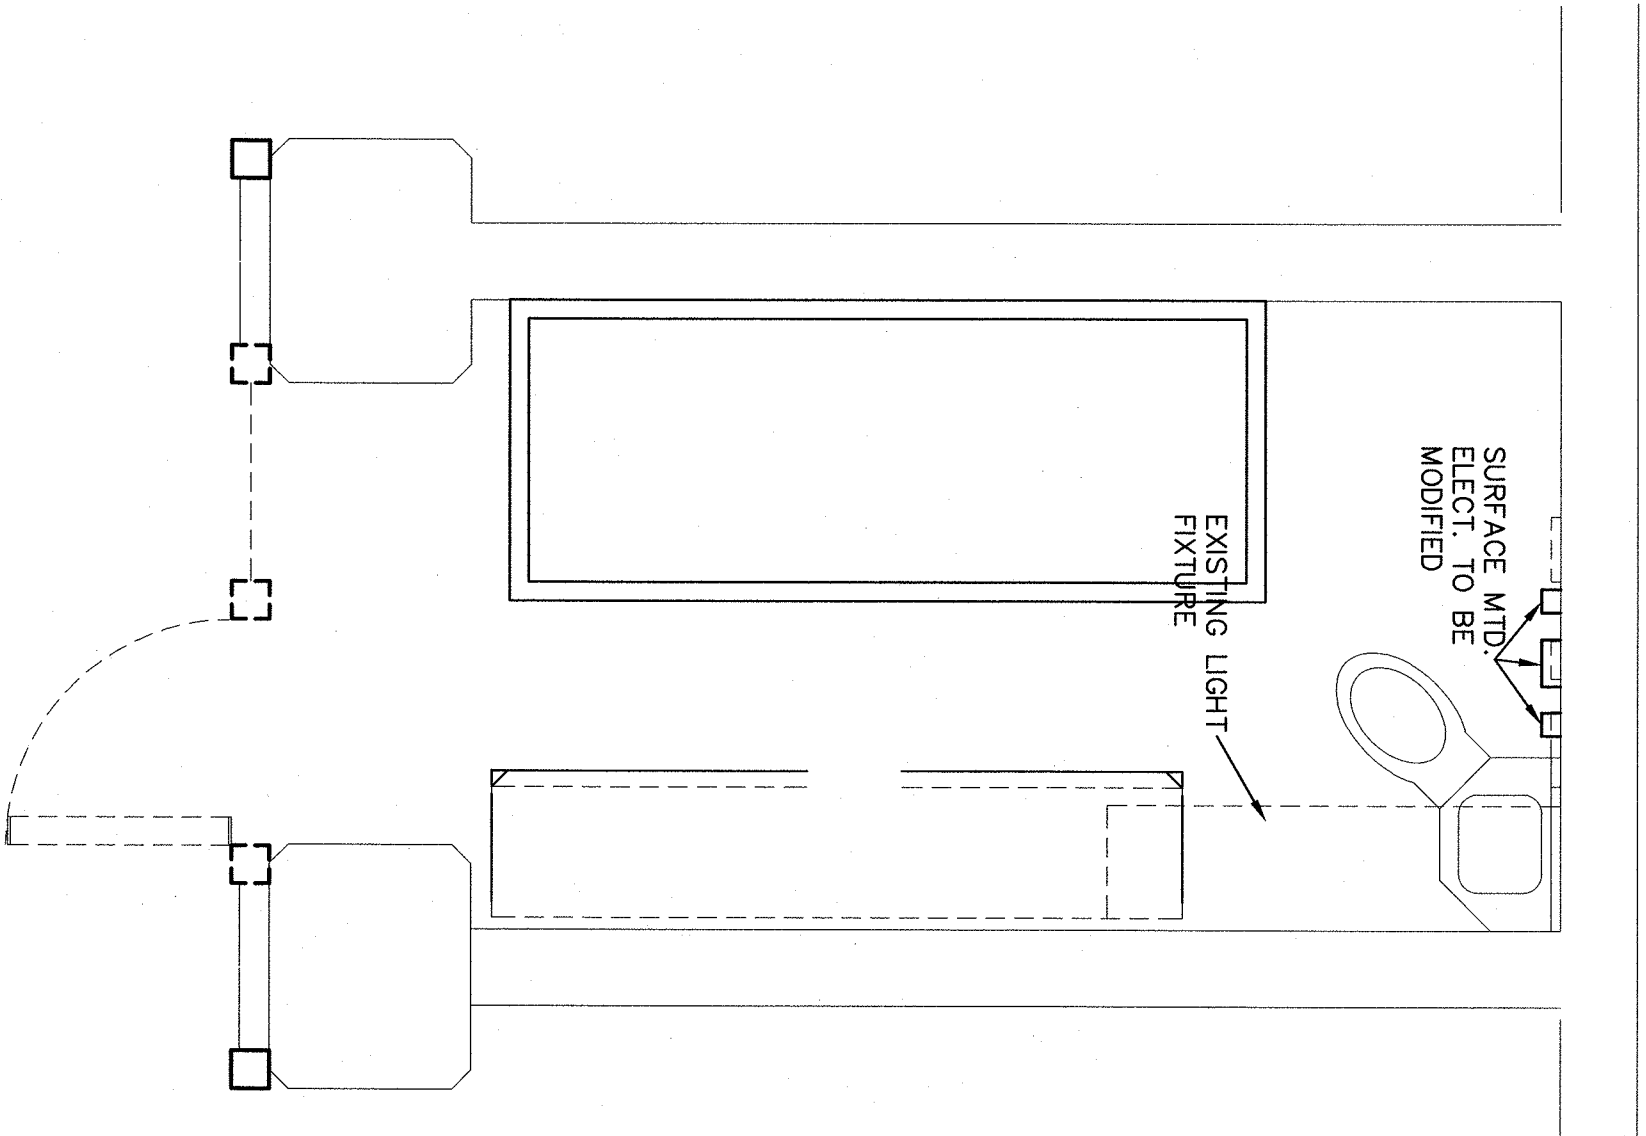


SERVICE CHASE

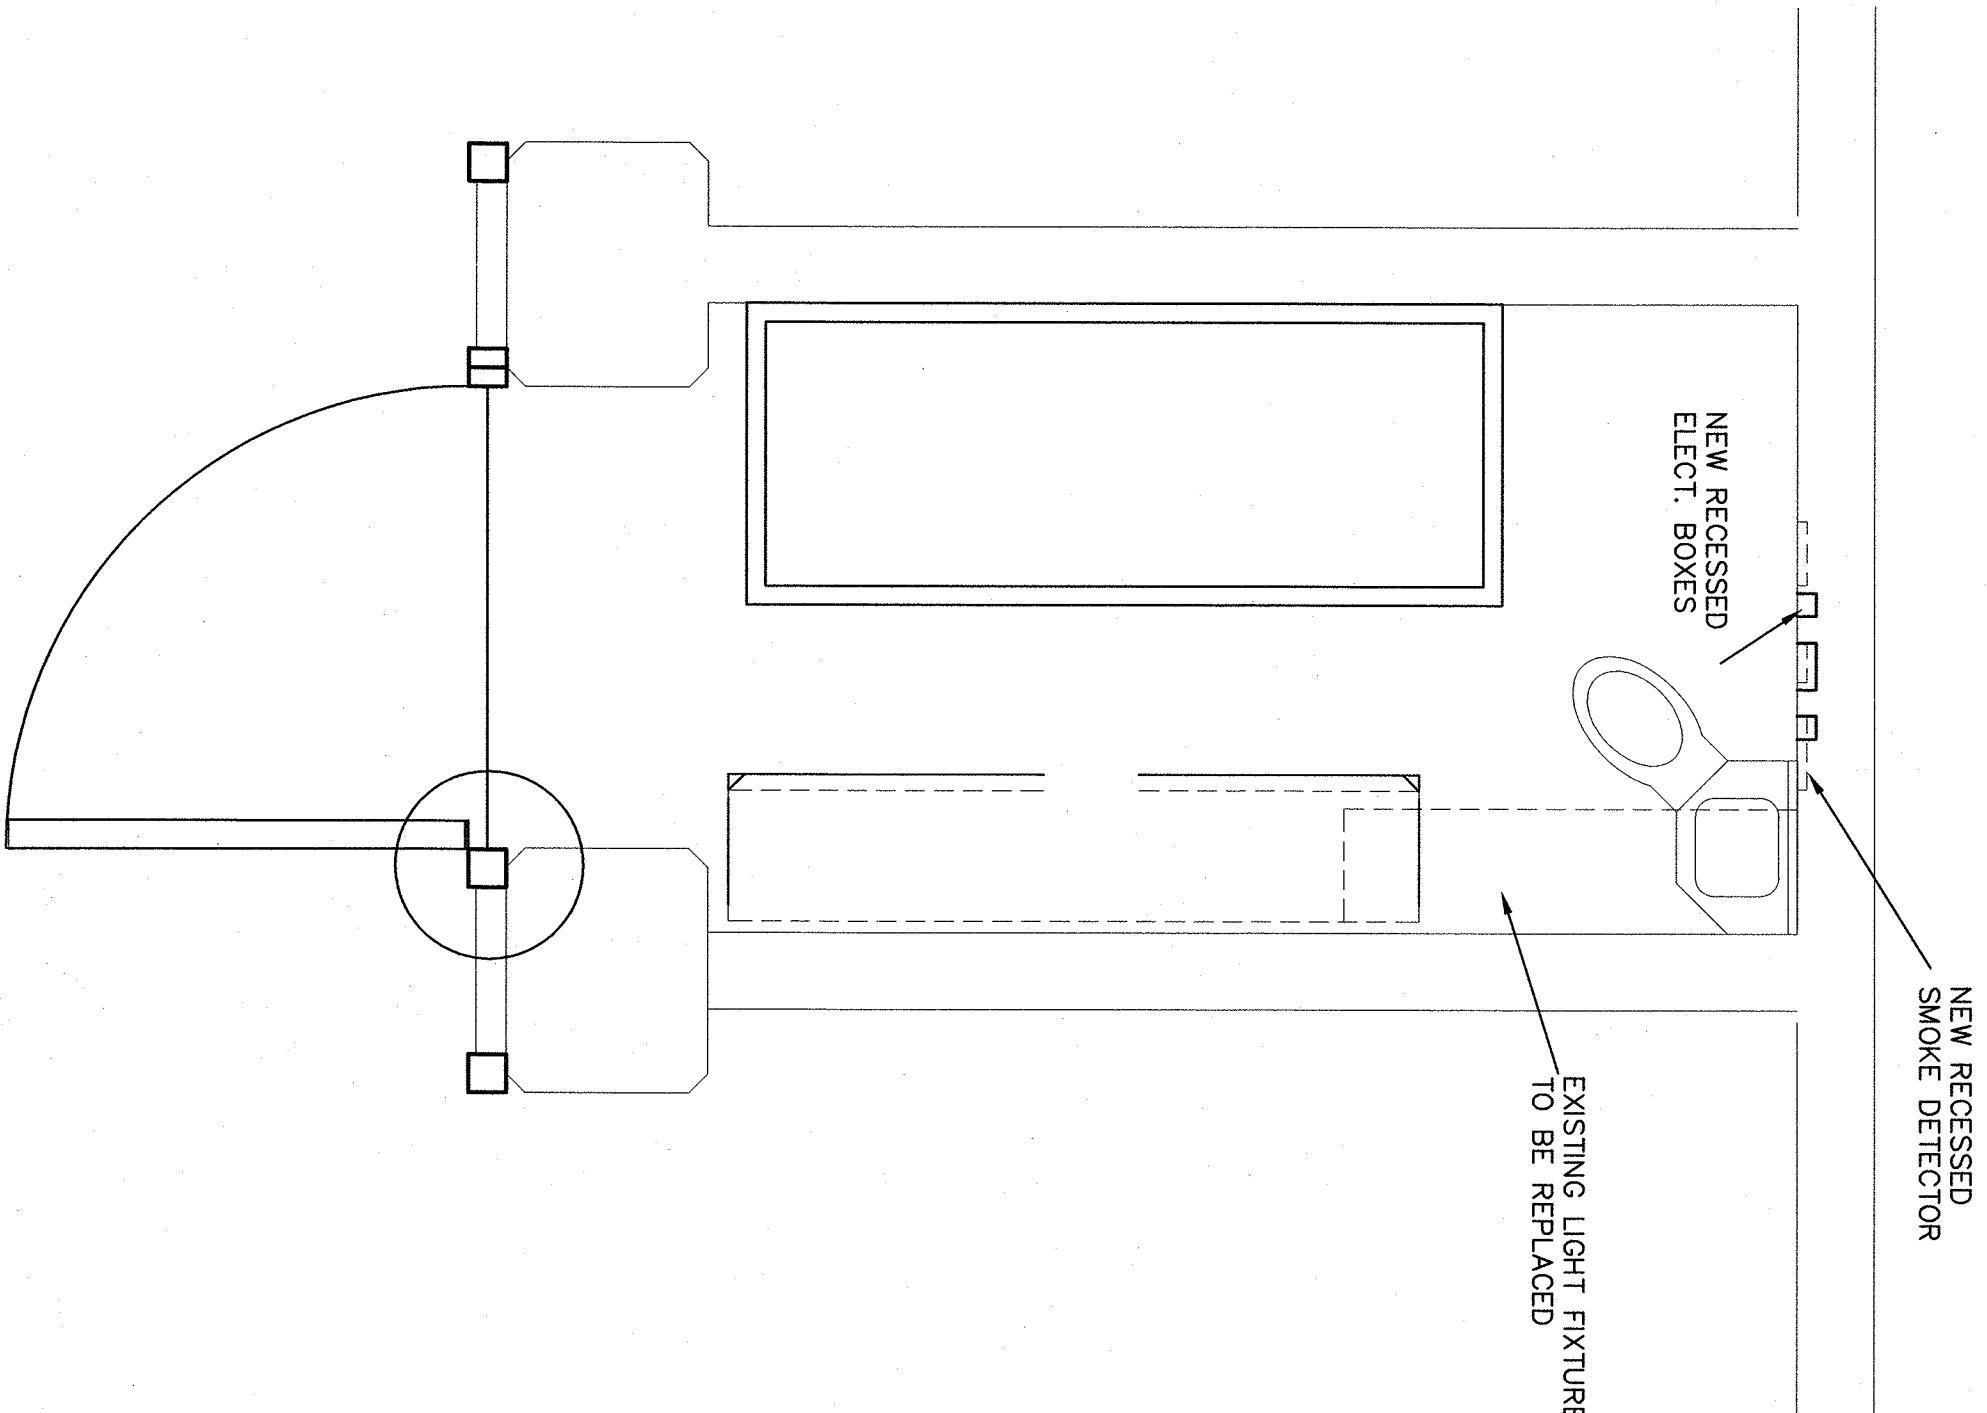


TYPICAL RENOVATED CELL

SCALE/ÉCHELLE: 1:20  
0mm 500mm 1000mm 1500mm 2000mm 2500mm

EXISTING ELEC.  
CONDUIT TEMPORARILY  
REMOVE AND REINSTALL

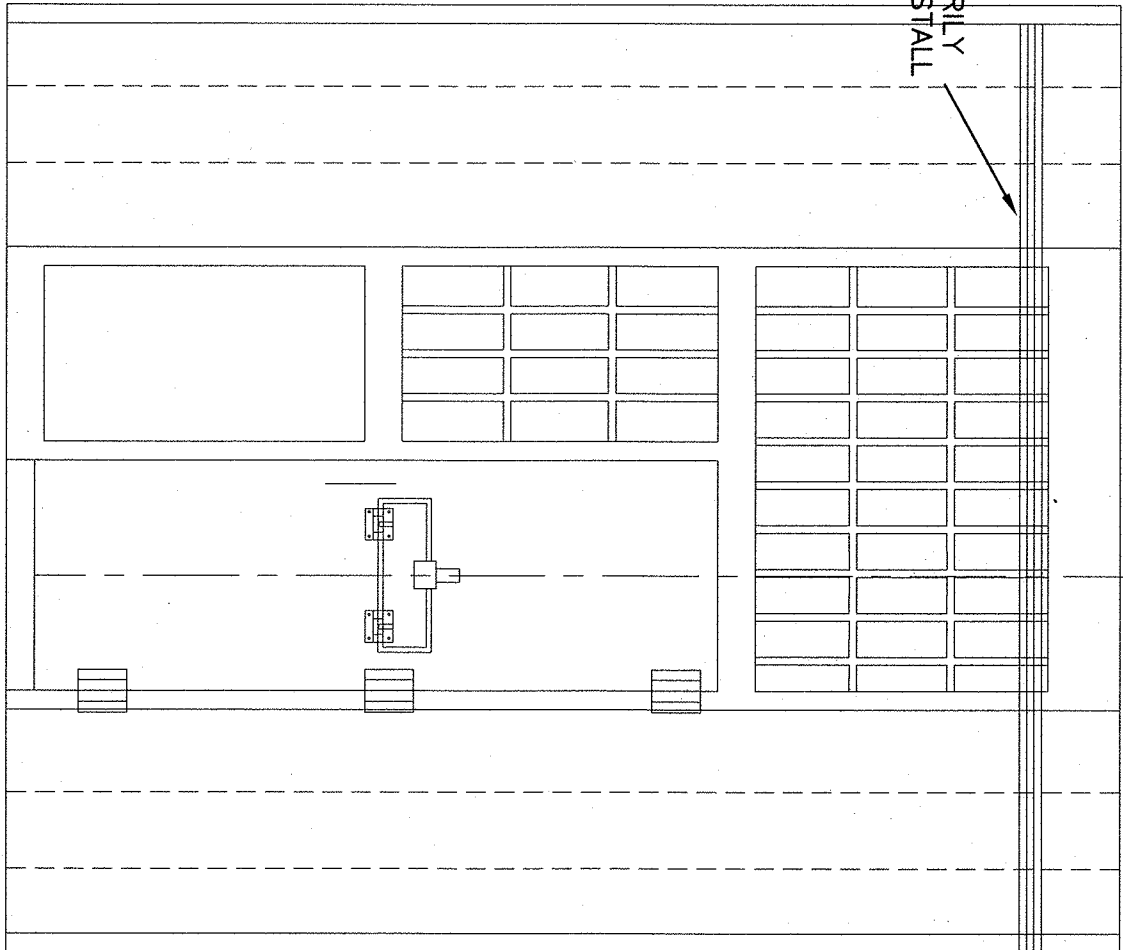

DOOR POSITION SWITCH  
RECONNECT TO EXISTING  
DOOR POSITION SWITCH WIRING

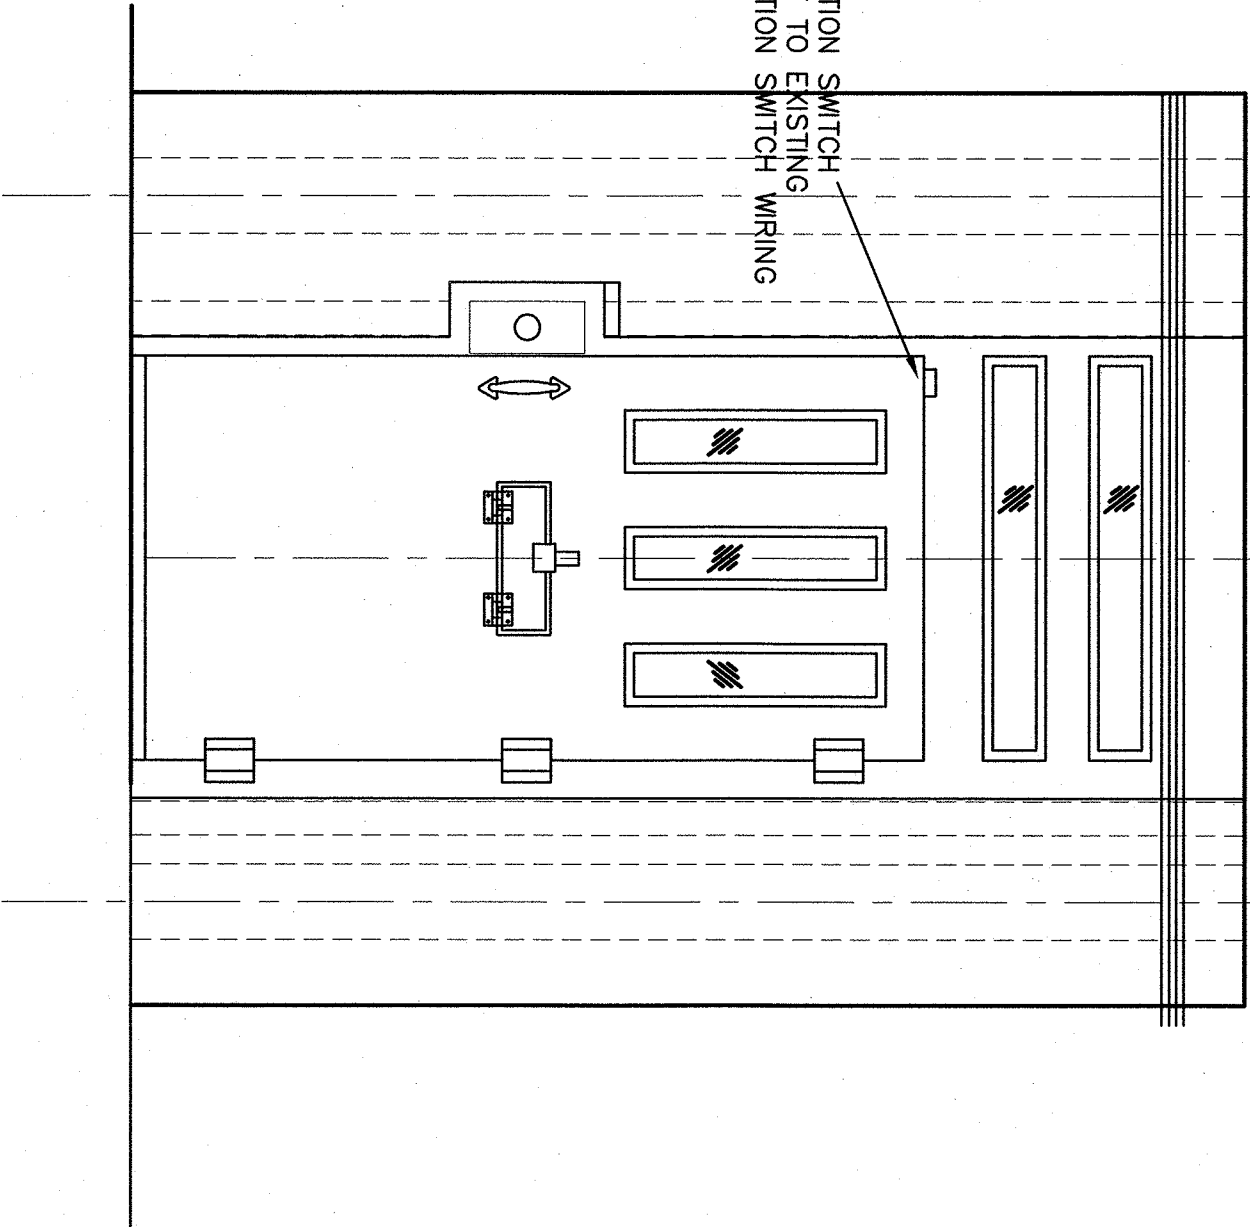


NOTE: DOOR RELEASED FOR  
CELL B4-254

TYPICAL EXISTING CELL

SCALE/ÉCHELLE: 1:20  
0mm 500mm 1000mm 1500mm 2000mm 2500mm

TYP. NEW CELL DOORS

SCALE/ÉCHELLE: 1:20  
0mm 500mm 1000mm 1500mm 2000mm 2500mm

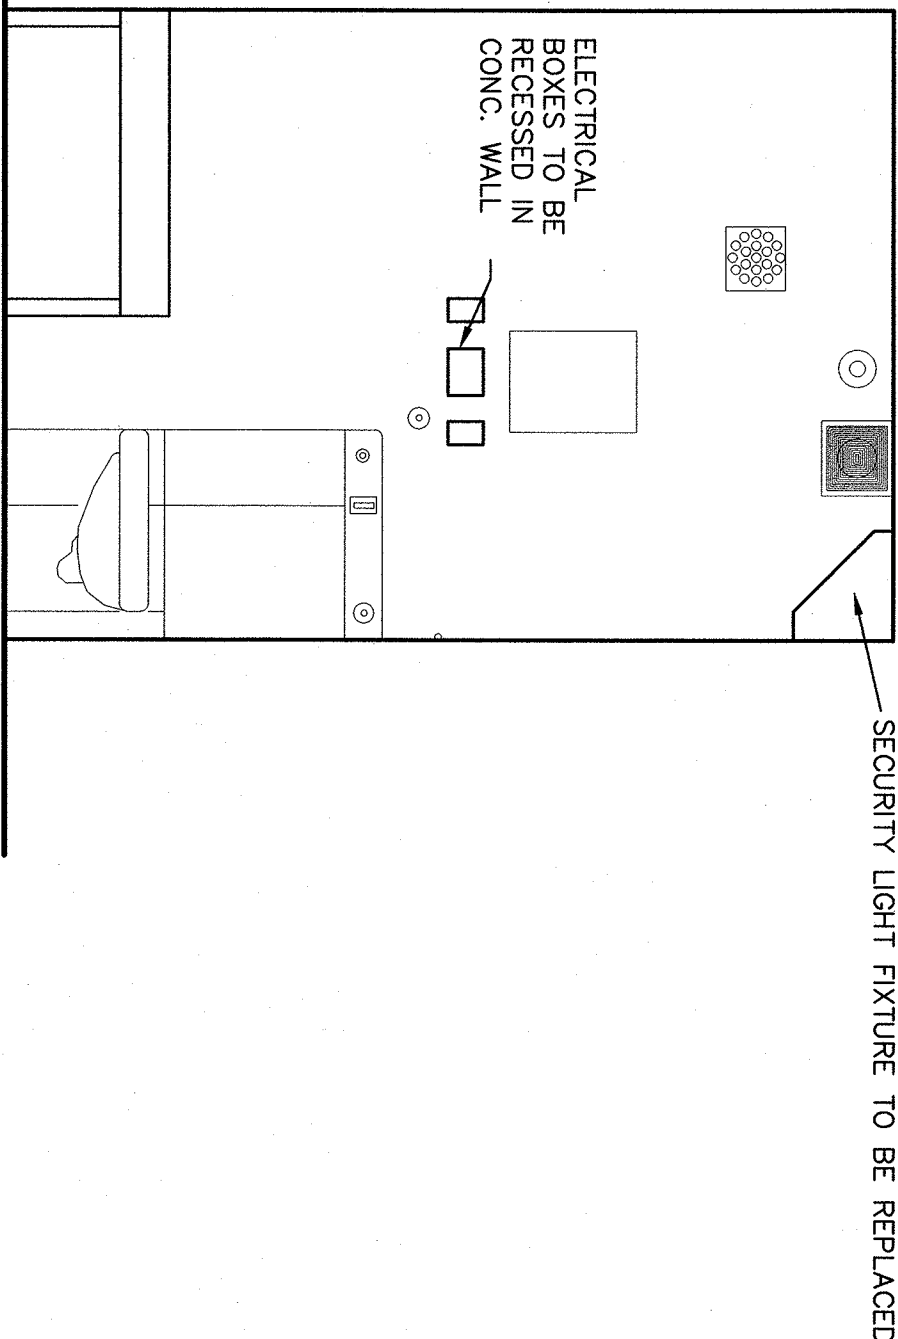

BACK WALL ELEVATION

SCALE: 1:20

0mm 500mm 1000mm 1500mm 2000mm 2500mm

TYPICAL CELL ELEVATIONS

EXISTING 150 X 150mm JUNCTION BOXES (3)  
TO REMAIN

REMOVE EXISTING SURFACE MOUNTED  
BOXES AND DEVICES. RE-INSTALL  
NEW RECESSED BOXES & DEVICES.  
SEE DETAIL ON E2.

EXISTING FLUORESCENT CORNER  
MOUNT LUMINAIRE. REPLACE WITH  
KENALL CORNER/1200-400-20-4/7-1.  
RELOCATE TO NEW POSITION. RE-USE  
TO HAVE 12 ga COLD ROLLED STEEL  
HOUSING AND BASE. 100W 4000K LED LAMP.  
VOLTAGE TO MATCH EXISTING. INNER LENSE  
0.125" PRES-A-TO AIRPLUG. EXTERIOR LENSE  
0.125" PRES-A-TO AIRPLUG. EXTERIOR LENSE  
FASTENERS WITH CENTER PIN. KENALL OR EQUAL.


EXISTING ELECTRICAL LOCK TO  
BE RELOCATED BY OTHERS.  
DISCONNECT/RECONNECT AS REQUIRED.  
RE-USE EXISTING WIRING.

EXISTING CELL CALL CANCELLATION KEY  
SWITCH. RELOCATE TO NEW DOOR FRAME.  
RE-USE EXISTING WIRING. PROVIDE BACKBOX  
WITH FLEX CONDUIT TO WIRING ABOVE.


EXISTING WIRING ABOVE  
DOORS (DOOR CONTROL AND CELL  
CALL)

SCALE/ÉCHELLE: 1:20  
0mm 500mm 1000mm 1500mm 2000mm 2500mm

TYPICAL CELL

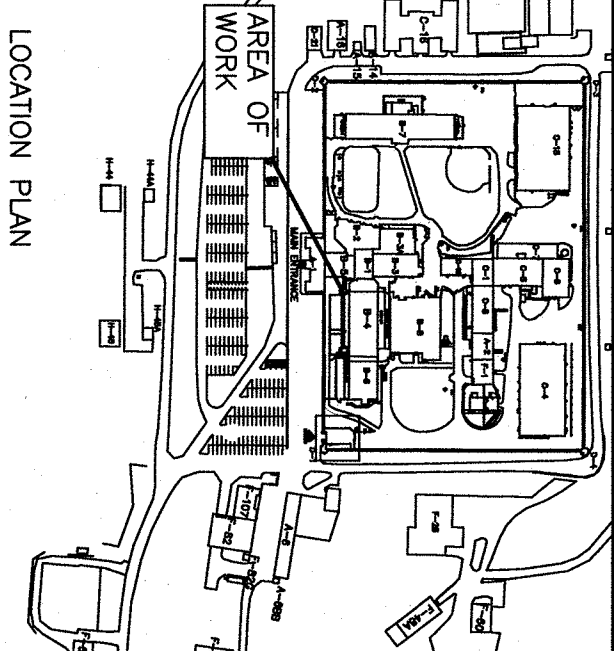

LOCATION PLAN

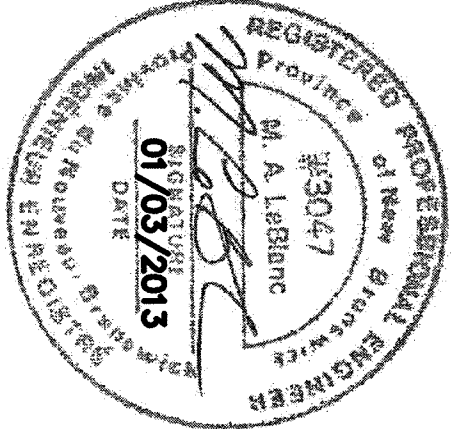

CELL UPGRADES  
SHEPODY HEALING  
CENTRE  
DORCHESTER, NB  
DORCHESTER PENITENTIARY

ELECTRICAL REVISIONS

designed MAL	comp'd
date	date
drawn MAL	designed
date	date
approved TSD	approved
date	date

Project number  
R043937.001